


SUPERO[®]

SC836 Chassis Series

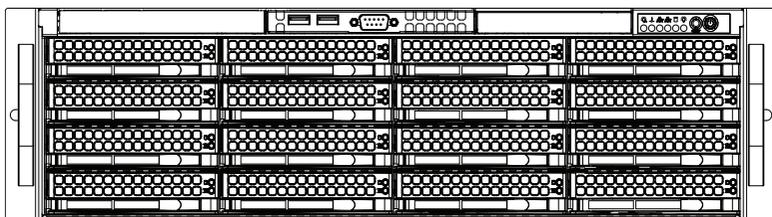

SC836A-R1200B

SC836E1-R800B

SC836E1-R800V

SC836E2-R800B

SC836E2-R800V

SC836S2-R800B

SC836S2-R800V

SC836TQ-R710B

SC836TQ - R800B

SC836TQ-R800V

User's Manual

2.0c

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. **Please Note: For the most up-to-date version of this manual, please see our web site at www.supermicro.com.**

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software, if any, and documentation may not, in whole or in part, be copied, photocopied, reproduced, translated or reduced to any medium or machine without prior written consent.

IN NO EVENT WILL SUPERMICRO BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPERMICRO SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Super Micro's total liability for all claims will not exceed the price paid for the hardware product.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate"

WARNING: Handling of lead solder materials used in this product may expose you to lead, a chemical known to the State of California to cause birth defects and other reproductive harm.

Manual Revision 2.0c
Release Date: February 4, 2010

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document.

Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2010 by Super Micro Computer, Inc.
All rights reserved.
Printed in the United States of America

Preface

About This Manual

This manual is written for professional system integrators and PC technicians. It provides information for the installation and use of the SC836 3U chassis. Installation and maintenance should be performed by experienced technicians only.

Supermicro's SC836 3U chassis features a unique and highly optimized design for dual-core Xeon platforms. The chassis is equipped with a redundant 710W, 800W or 1200W high-efficiency power supply. High-performance fans provide ample optimized cooling for FB-DIMM memory modules and 16 hot-swap drive bays offers maximum storage capacity in a 3U form factor.

This document lists compatible parts available when this document was published. Always refer to the our Web site for updates on supported parts and configurations.

Manual Organization

Chapter 1: Introduction

The first chapter provides a checklist of the main components included with the SC836 chassis and describes the main features of the chassis. This chapter also includes contact information.

Chapter 2: System Safety

This chapter lists warnings, precautions, and system safety. You should thoroughly familiarize yourself with this chapter for a general overview of safety precautions that should be followed before installing and servicing this chassis.

Chapter 3: Chassis Components

Refer here for details on this chassis model including the fans, bays, airflow shields, and other components.

Chapter 4: System Interface

This chapter provides details on the system interface, which includes the functions and information provided by the control panel on the chassis as well as other LEDs located throughout the system.

Chapter 5: Chassis Setup and Maintenance

Refer to this chapter for detailed information on this chassis. You should follow the procedures given in this chapter when installing, removing, or reconfiguring your chassis.

Chapter 6: Advanced Setup

This chapter includes detailed instructions for advanced setup configurations including multiple chassis connections.

Chapter 7: Rack Installation

Refer to this chapter for detailed information on chassis rack installation. You should follow the procedures given in this chapter when installing, removing or reconfiguring your chassis into a rack environment.

Compatible Backplanes

This section lists compatible cables, power supply specifications, and compatible backplanes. Not all compatible backplanes are listed. Refer to our Web site for the latest compatible backplane information.

Appendix A SC836 Chassis Cables**Appendix B SC836 Power Supply Specifications****Appendix C SAS-836EL Series Backplane Specifications****Appendix D SAS-836TQ Backplane Specifications****Appendix E SAS-836A Backplane Specifications****Appendix F PCC-JBWR2 and CSE-PTJBOD-CB1 Power Control Card Specifications**

Table of Contents

Chapter 1 Introduction

| | | |
|-----|--|-----|
| 1-1 | Overview | 1-1 |
| 1-2 | Shipping List..... | 1-2 |
| | Part Numbers..... | 1-2 |
| 1-3 | Chassis Features | 1-3 |
| | CPU Support..... | 1-3 |
| | I/O Expansion slots | 1-3 |
| | Peripheral Drives..... | 1-3 |
| | Other Features..... | 1-3 |
| 1-4 | Contacting Supermicro..... | 1-4 |
| 1-5 | Returning Merchandise for Service..... | 1-5 |

Chapter 2 System Safety

| | | |
|-----|-------------------------------------|-----|
| 2-1 | Overview | 2-1 |
| 2-2 | Warnings and Precautions | 2-1 |
| 2-3 | Preparing for Setup..... | 2-1 |
| 2-4 | Electrical Safety Precautions | 2-2 |
| 2-5 | General Safety Precautions | 2-3 |
| 2-6 | System Safety | 2-3 |

Chapter 3 Chassis Components

| | | |
|-----|--|-----|
| 3-1 | Overview | 3-1 |
| 3-2 | Components..... | 3-1 |
| | Chassis and Chassis Bays | 3-1 |
| | Backplane..... | 3-1 |
| | Fans | 3-1 |
| | Mounting Rails | 3-1 |
| | Power Supply..... | 3-2 |
| | Air Shroud | 3-2 |
| 3-3 | Where to get Replacement Components..... | 3-2 |

Chapter 4 System Interface

| | | |
|-----|-----------------------------|-----|
| 4-1 | Overview | 4-1 |
| 4-2 | Control Panel Buttons | 4-2 |
| 4-3 | Control Panel LEDs | 4-2 |
| 4-4 | Drive Carrier LEDs..... | 4-4 |

Chapter 5 Basic Chassis Setup and Maintenance

| | | |
|-----|--------------------|-----|
| 5-1 | Overview | 5-1 |
| 5-2 | Installation | 5-1 |

| | | |
|-----|--|------|
| 5-3 | Removing the Chassis Cover | 5-2 |
| 5-4 | Installing the Hard Drives..... | 5-3 |
| | Removing Hard Drive Carriers from the Chassis | 5-3 |
| | Installing a Hard Drive to the Hard Drive Carrier | 5-3 |
| 5-5 | Installing the Motherboard | 5-5 |
| | Permanent and Optional Standoffs..... | 5-5 |
| | Standoffs Labeling | 5-5 |
| | Motherboard Installation..... | 5-5 |
| | Power Supply Connections..... | 5-6 |
| | I/O Shield and Expansion Card Setup..... | 5-7 |
| | Installing an I/O Port Panel..... | 5-7 |
| | Installing an Expansion Card..... | 5-8 |
| 5-6 | Installing the Air Shroud, Rear Fan, and Checking Air Flow | 5-9 |
| | Installing the Air Shroud..... | 5-9 |
| | Installing Rear System Fans..... | 5-10 |
| | Checking the Server's Air Flow..... | 5-11 |
| 5-7 | Chassis Maintenance..... | 5-12 |
| | Replacing a System Fans..... | 5-12 |
| | Replacing the Power Supply..... | 5-13 |
| | Replacing the Power Distributor | 5-14 |
| | Replacing the Front Panel | 5-15 |
| | Replacing or Installing the Front Port Panel..... | 5-15 |

Chapter 6 Advanced Setup

| | | |
|-----|---------------------------------------|-----|
| 6-1 | Overview | 6-1 |
| 6-2 | Dual Port and Expanders..... | 6-2 |
| | Single Ports..... | 6-2 |
| | Dual Ports | 6-2 |
| 6-3 | Failover..... | 6-3 |
| | Single Host Bus Adapter..... | 6-3 |
| | Single Host Bus Adapter Failover..... | 6-3 |
| | Dual Host Bus Adapter | 6-4 |
| | Dual Host Bus Adapter Failover..... | 6-4 |
| 6-4 | Cascading Backplanes..... | 6-4 |
| | Power Control Card | 6-4 |

Chapter 7 Rack Installation

| | | |
|-----|---------------------------|-----|
| 7-1 | Overview | 7-1 |
| 7-2 | Unpacking the System..... | 7-1 |
| 7-3 | Preparing for Setup..... | 7-1 |

| | | |
|-----|---|-----|
| | Choosing a Setup Location..... | 7-1 |
| 7-4 | Warnings and Precautions..... | 7-2 |
| | Rack Precautions..... | 7-2 |
| | General Server Precautions..... | 7-2 |
| 7-5 | Rack Mounting Considerations..... | 7-3 |
| | Ambient Operating Temperature..... | 7-3 |
| | Reduced Airflow..... | 7-3 |
| | Mechanical Loading..... | 7-3 |
| | Circuit Overloading..... | 7-3 |
| | Reliable Ground..... | 7-3 |
| 7-6 | Rack Mounting Instructions..... | 7-4 |
| | Identifying the Sections of the Rack Rails..... | 7-4 |
| | Locking Tabs..... | 7-5 |
| | Releasing the Inner Rail..... | 7-5 |
| | Installing The Inner Rails on the Chassis..... | 7-6 |
| | Installing the Outer Rails on the Rack..... | 7-7 |
| | Standard Chassis Installation..... | 7-8 |
| | Optional Quick Installation Method..... | 7-9 |

Appendix A SC836 Chassis Cables

Appendix B SC836 Power Supply Specifications

Appendix C SAS-836EL Backplane Specifications

Appendix D SAS-836TQ Backplane Specifications

Appendix E SAS-836A Backplane Specifications

Appendix F PCC-JBPWR2 and CSE-PTJBOD-CB1 Power Control Card Specifications

Chapter 1

Introduction

1-1 Overview

Supernano's SC836 storage chassis supports up to sixteen hot-swappable 3.5" SAS/SATA hard drive bays, the industry's highest storage density for a 3U system. The SC836 include 100% cooling redundancy and high efficiency (1+1) redundant 710W, 800W, or 1200W (93%) Gold Level power supplies with PM BUS functionality for enhanced power management. The SC836 is optimized for the next-generation dual-processor Intel® Xeon® (5500 series) and AMD Opteron™ platforms. Direct attached HDD backplane (TQ version), multilane backplane (A version) and expanders' backplane (E1, E2 versions) are available for application specific solution optimization. Heavy duty palletized packaging is available to ensure secure system reliability during shipping and tool-less, roller rail designs for easy installation and maintenance are standard with each system.

| SC836 Chassis Series | | | | |
|--|------------|--|------------------|------------------------------------|
| Model | CPU | HDD | I/O Slots | Power Supply |
| SC836A-R1200B | DP/UP | 16x SAS / SATA | 7x FF | 1200W Redundant (Gold Level) |
| SC836TQ-R800V / SC836TQ-R800B | DP/UP | 16x SAS / SATA | 7x FF | R800W Redundant |
| SC836TQ-R710B | DP/UP | 16x SAS / SATA | 7x FF | 710W DC Redundant |
| SC836S2-R800V / SC836S2-R800B | DP/UP | 16x U320 SCSI Dual Channel | 7x FF | 800W Redundant |
| SC836E1-R800V / SC836E1-R800B | DP/UP | 16x SAS / SATA Bays (+) 1x 28-Port SAS Expander | 7x FF | R800W Redundant |
| SC836E2-R800V / SC836E2-R800B | DP/UP | 16x SAS / SATA Bays (+) 2x 28-Port SAS Expander | 7x FF | 800W Redundant |

1-2 Shipping List

Part Numbers

Please visit the following link for the latest shipping lists and part numbers for your particular chassis model:

<http://www.supermicro.com/products/chassis/3U/?chs=836>

1-3 Chassis Features

The SC836 3U high-performance chassis includes the following features:

CPU Support

The SC836 chassis supports a DP Dual-core Xeon processor. Please refer to the motherboard specifications pages on our Web site for updates on supported processors for this chassis

Hard Drives

The SC836 chassis features sixteen slots for U320 SCSI or SAS/SATA drives. These drives are hot-swappable. Meaning that once set up correctly, these drives may be removed without powering-down the server. In addition, these drives support SAF-TE (SCSI) and SES2 (SAS/SATA).

I/O Expansion slots

Each version of the SC836 chassis includes seven full I/O expansion slots.

Peripheral Drives

Each SC836 chassis supports one slim DVD-ROM drive (optional) These drives allow you to quickly install or save data.

Other Features

Other onboard features are included to promote system health. These include various five cooling fans, a convenient power switch, reset button, and LED indicators.

1-4 Contacting Supermicro

Headquarters

Address: Super Micro Computer, Inc.
980 Rock Ave.
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000

Fax: +1 (408) 503-8008

Email: marketing@supermicro.com (General Information)
support@supermicro.com (Technical Support)

Web Site: www.supermicro.com

Europe

Address: Super Micro Computer B.V.
Het Sterrenbeeld 28, 5215 ML
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390

Fax: +31 (0) 73-6416525

Email: sales@supermicro.nl (General Information)
support@supermicro.nl (Technical Support)
rma@supermicro.nl (Customer Support)

Asia-Pacific

Address: Super Micro Computer, Inc.
4F, No. 232-1, Liancheng Rd.
Chung-Ho 235, Taipei County
Taiwan, R.O.C.

Tel: +886-(2) 8226-3990

Fax: +886-(2) 8226-3991

Web Site: www.supermicro.com.tw

Technical Support:

Email: support@supermicro.com.tw

Tel: 886-2-8226-1900

1-5 Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

For faster service, RMA authorizations may be requested online (<http://www.supermicro.com/support/rma/>).

Whenever possible, repack the chassis in the original Supermicro carton, using the original packaging material. If these are no longer available, be sure to pack the chassis securely, using packaging material to surround the chassis so that it does not shift within the carton and become damaged during shipping.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alteration, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

Chapter 2

System Safety

2-1 Overview

This chapter provides a quick setup checklist to get your chassis up and running. Following the steps in order given should enable you to have your chassis setup and operational within a minimal amount of time. These instructions assume that you are an experienced technician, familiar with common concepts and terminology.

2-2 Warnings and Precautions

You should inspect the box the chassis was shipped in and note if it was damaged in any way. If the chassis itself shows damage, file a damage claim with the carrier who delivered your system.

Decide on a suitable location for the rack unit that will hold the chassis. It should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated.

You will also need it placed near at least two grounded power outlets. The SC836 chassis includes two redundant power supplies which require two grounded outlets.

2-3 Preparing for Setup

The SC836 chassis includes a set of rail assemblies, including mounting brackets and mounting screws you will need to install the systems into the rack. Please read this manual in its entirety before you begin the installation procedure.

2-4 Electrical Safety Precautions

Basic electrical safety precautions should be followed to protect yourself from harm and the SC836 from damage:

- Be aware of the locations of the power on/off switch on the chassis as well as the room's emergency power-off switch, disconnection switch or electrical outlet. If an electrical accident occurs, you can then quickly remove power from the system.
- Do not work alone when working with high voltage components.
- Power should always be disconnected from the system when removing or installing main system components, such as the serverboard, memory modules and the DVD-ROM (not necessary for hot-swappable drives). When disconnecting power, you should first power down the system with the operating system and then unplug the power cords from all the power supply modules in the system.
- When working around exposed electrical circuits, another person who is familiar with the power-off controls should be nearby to switch off the power, if necessary.
- Use only one hand when working with powered-on electrical equipment. This is to avoid making a complete circuit, which will cause electrical shock. Use extreme caution when using metal tools, which can easily damage any electrical components or circuit boards they come into contact with.
- Do not use mats designed to decrease electrostatic discharge as protection from electrical shock. Instead, use rubber mats that have been specifically designed as electrical insulators.
- The power supply power cord must include a grounding plug and must be plugged into grounded electrical outlets.
- Serverboard battery: CAUTION - There is a danger of explosion if the onboard battery is installed upside down, which will reverse its polarities This battery must be replaced only with the same or an equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

- Please handle used batteries carefully. Do not damage the battery in any way; a damaged battery may release hazardous materials into the environment. Do not discard a used battery in the garbage or a public landfill. Please comply with the regulations set up by your local hazardous waste management agency to dispose of your used battery properly.
- DVD-ROM laser: CAUTION - this server may have come equipped with a DVD-ROM drive. To prevent direct exposure to the laser beam and hazardous radiation exposure, do not open the enclosure or use the unit in any unconventional way.

2-5 General Safety Precautions

- Keep the area around the chassis clean and free of clutter.
- Place the chassis top cover and any system components that have been removed away from the system or on a table so that they won't accidentally be stepped on.
- While working on the system, do not wear loose clothing such as neckties and unbuttoned shirt sleeves, which can come into contact with electrical circuits or be pulled into a cooling fan.
- Remove any jewelry or metal objects from your body, which are excellent metal conductors that can create short circuits and harm you if they come into contact with printed circuit boards or areas where power is present.
- After accessing the inside of the system, close the system back up and secure it to the rack unit with the retention screws after ensuring that all connections have been made.

2-6 System Safety

Electrostatic discharge (ESD) is generated by two objects with different electrical charges coming into contact with each other. An electrical discharge is created to neutralize this difference, which can damage electronic components and printed circuit boards. The following measures are generally sufficient to neutralize this difference before contact is made to protect your equipment from ESD:

- Do not use mats designed to decrease electrostatic discharge as protection from electrical shock. Instead, use rubber mats that have been specifically designed as electrical insulators.

- Use a grounded wrist strap designed to prevent static discharge.
- Keep all components and printed circuit boards (PCBs) in their antistatic bags until ready for use.
- Touch a grounded metal object before removing any board from its antistatic bag.
- Do not let components or PCBs come into contact with your clothing, which may retain a charge even if you are wearing a wrist strap.
- Handle a board by its edges only; do not touch its components, peripheral chips, memory modules or contacts.
- When handling chips or modules, avoid touching their pins.
- Put the serverboard and peripherals back into their antistatic bags when not in use.
- For grounding purposes, make sure your computer chassis provides excellent conductivity between the power supply, the case, the mounting fasteners and the serverboard.

Chapter 3

Chassis Components

3-1 Overview

This chapter describes the most common components included with your chassis. Some components listed may not be included or compatible with your particular chassis model. For more information, see the installation instructions detailed later in this manual.

3-2 Components

Chassis and Chassis Bays

Chassis may include one optional slim CD-ROM or DVD-ROM, one front port panel, and 16 hard drive bays. Hard drives must be purchased separately. For the latest shipping lists, visit our Web site at: <http://www.supermicro.com>.

Backplane

Each SC836 chassis comes with a 3U backplane. Depending upon your order, your backplane will accept SAS/SATA drives, SAS only, or SCSI drives. For more information regarding compatible backplanes, view the appendices found at the end of this manual. In addition, visit our Web site for the latest information: <http://www.supermicro.com>.

Fans

The SC836 chassis accepts five system fans. System fans for SC836 chassis are powered from the serverboard. These fans are 3U compatible and are powered by 3-pin connectors.

Mounting Rails

The SC836 can be placed in a rack for secure storage and use. To setup your rack, follow the step-by-step instructions included in this manual.

Power Supply

Each SC836 chassis model includes redundant high-efficiency hot-swappable power supply rated at 710, 800 or 1200 Watts. In the unlikely event power supply fails in one power supply, you can remove and replace the faulty power supply without powering down the system.

Air Shroud

Air shrouds are shields, usually plastic, that funnel air directly to where it is needed.

Always use the air shroud included with your chassis.

3-3 Where to get Replacement Components

Though not frequently, you may need replacement parts for your system. To ensure the highest level of professional service and technical support, we strongly recommend purchasing exclusively from our Supermicro Authorized Distributors / System Integrators / Resellers. A list of Supermicro Authorized Distributors / System Integrators / Reseller can be found at: <http://www.supermicro.com>. Click the Where to Buy link.

Chapter 4

System Interface

4-1 Overview

There are several LEDs on the control panel as well as others on the drive carriers to keep you constantly informed of the overall status of the system as well as the activity and health of specific components. Most SC836 models have two buttons on the chassis a control panel- a reset button and an on/off switch. This chapter explains the meanings of all LED indicators and the appropriate response you may need to take.


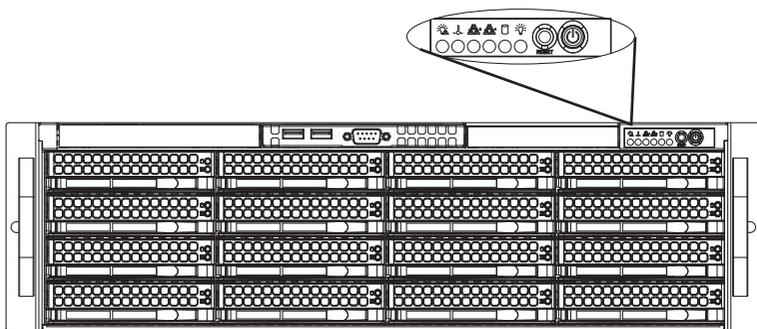


Figure 4-1: SC836 Front Panel

4-2 Control Panel Buttons

There are two push-buttons located on the front of the chassis. These are (in order from left to right) a reset button and a power on/off button.

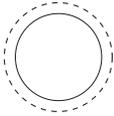

- **Reset:** The reset button is used to reboot the system.



- **Power:** The main power switch is used to apply or remove power from the power supply to the server system. Turning off system power with this button removes the main power but keeps standby power supplied to the system. Therefore, you must unplug system before servicing.

4-3 Control Panel LEDs

The control panel located on the front of the SC836 chassis has 6 LEDs. These LEDs provide you with critical information related to different parts of the system. This section explains what each LED indicates when illuminated and any corrective action you may need to take.



- **Power Failure:** When this LED flashes, it indicates a power failure in the power supply.



- **Overheat/Fan Fail:** When this LED flashes it indicates a fan failure. When continuously on (not flashing) it indicates an overheat condition, which may be caused by cables obstructing the airflow in the system or the ambient room temperature being too warm. Check the routing of the cables and make sure all fans are present and operating normally. You should also check to make sure that the chassis covers are installed. Finally, verify that the heatsinks are installed properly. This LED will remain flashing or on as long as the overheat condition exists.



- **NIC2:** Indicates network activity on LAN2 when flashing.



- **NIC1:** Indicates network activity on LAN1 when flashing.



- **HDD:** Indicates IDE channel activity. SAS/SATA drive, SCSI drive, and/or DVD-ROM drive activity when flashing.



- **Power:** Indicates power is being supplied to the system's power supply units. This LED should normally be illuminated when the system is operating.

4-4 Drive Carrier LEDs

Each SAS drive carrier has two LEDs.

- **Blue:** When illuminated, this blue LED (on the front of the drive carrier) indicates drive activity. A connection to the SAS backplane enables this LED to blink on and off when that particular drive is being accessed.
- **Red:** The red LED to indicate a drive failure. If one of the SAS drives fail, you should be refer to your system management software.

Chapter 5

Basic Chassis Setup and Maintenance

5-1 Overview

This chapter details the basic steps required to install components to the chassis. The only tool you will use is a Phillips screwdriver. Print this page to use as a reference while setting up your chassis.

When coupled with an 836E series backplane, this chassis is capable of failover, and cascading. Review Chapter 6 and the SAS-836EL appendix in this manual for setup instructions.

5-2 Installation

Removing the Chassis Cover

Installing Hard Drives

Installing the Motherboard (Includes standoffs, I/O shield and expansion card installation)

Installing the Air Shroud, Rear Fan and Checking the Airflow

Chassis Maintenance (Includes replacing the system fans, power supply, power distributor and front panel)



Note: The SC836E1 and SC836E2 chassis support SAS drives only. For more information, review the SAS 836EL Backplane Specifications located in the appendices of this document.



Review the warnings and precautions listed in the manual before setting up or servicing this chassis. These include information in Chapter 2: System Safety and the warning/precautions listed in the setup instructions.

5-3 Removing the Chassis Cover

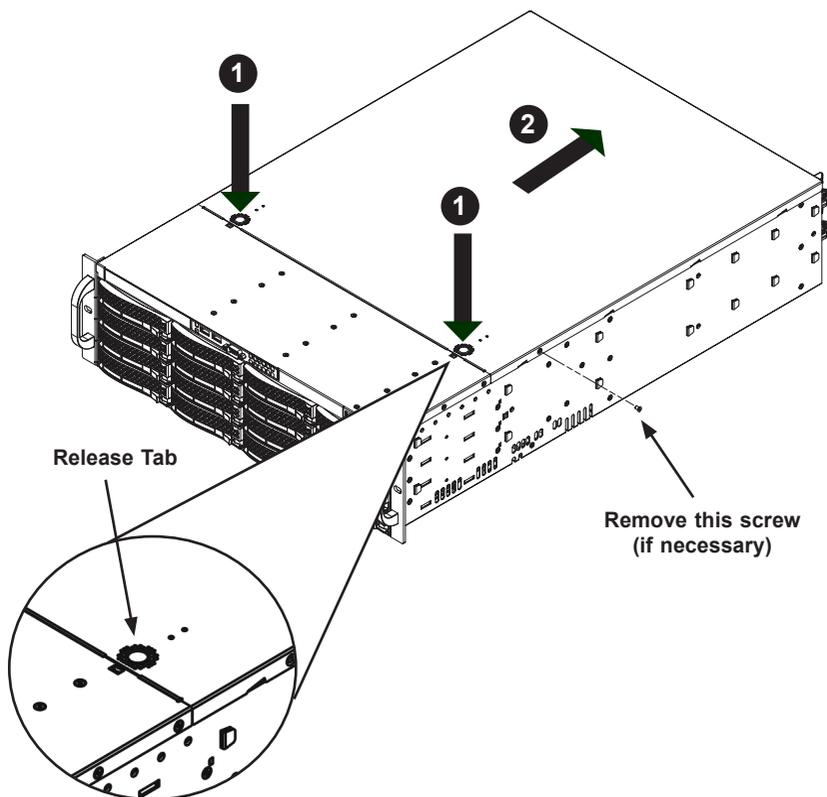


Figure 5-1: Removing the Chassis Cover

Removing the Cover

1. Press the release tabs to remove the cover from the locked position. Press both tabs at the same time. If necessary, you may need to remove the chassis cover screw.
2. Once the top cover is released from the locked position, slide the cover toward the rear of the chassis and lift the cover off the unit.



Warning: Except for short periods of time, do NOT operate the server without the cover in place. The chassis cover must be in place to allow proper airflow and prevent overheating.

5-4 Installing the Hard Drives

The drives are mounted in drive trays to simplify their installation and removal from the chassis.

Removing Hard Drive Carriers from the Chassis

Removing HDD Carriers

1. Press the release button on the drive carrier. This extends the drive carrier handle.
2. Use the handle to pull the drive out of the chassis. When replacing the carrier, use the handle to lock the tray into place.

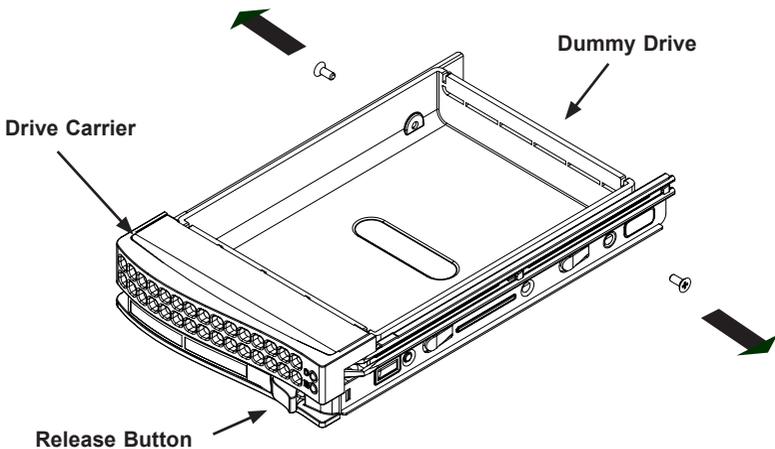


Figure 5-2: Removing Dummy Drive from Carrier

Installing a Hard Drive to the Hard Drive Carrier

Installing an HDD into a Carrier

1. Remove the screws (2) securing the dummy drive to the drive tray and separate the dummy drive.

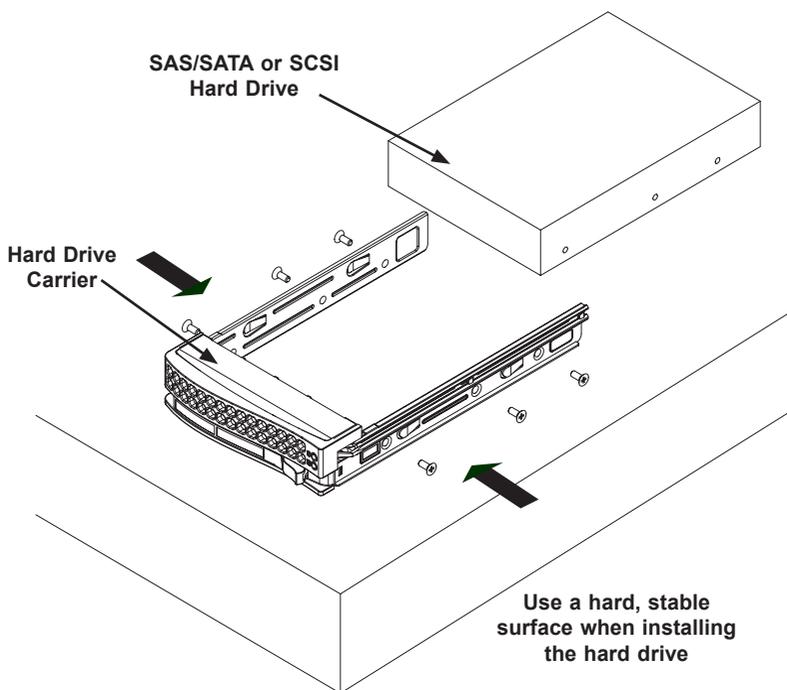


Figure 5-3: Installing a SAS or SATA Drive to Hard Drive Carrier

2. Place the hard drive carrier on a flat, stable surface such as a desk, table, or work bench.
3. Slide the hard drive into the carruer with the printed circuit board side facing down.
4. Carefully align the mounting holes in the hard drive and the carrier. Make sure the bottom of the hard drive and bottom of the hard drive carrier are flush.
5. Secure the hard drive using all six (6) screws.
6. Replace the drive tray into the chassis. Make sure to close the drive carrier using the drive carrier handle.



Warning! Enterprise level hard disk drives are recommended for use in Supermicro chassis and servers. For information on recommended HDDs, visit the Supermicro Web site at <http://www.supermicro.com/products/nfo/files/storage/SAS-1-CompList-110909.pdf>

5-5 Installing the Motherboard

Permanent and Optional Standoffs

Standoffs prevent short circuits by securing space between the motherboard and the chassis surface. The SC836 chassis includes permanent standoffs in locations used by most motherboards. These standoffs accept the rounded Phillips head screws included in the SC836 accessories packaging.

Some motherboard require additional screws for heatsinks, general components and/or non-standard security. Optional standoffs are included to these motherboards. To use an optional standoff, you must secure a hexagonal post by screwing it into the necessary spot.

Standoffs Labeling

Standoff locations are labeled on the bottom of the SC836 chassis with the letters: P, D, and A.

P = Most compatible motherboards have a processor or CPU located here. If necessary, place standoffs here for the CPU's heatsink.

D = Place optional standoffs here if your motherboard requires additional posts to hold the unit in place.

A = A number of older motherboards have processors or CPUs located in areas designated "A". Place standoffs here for the CPU's heatsink.

Motherboard Installation

Installing the Motherboard

1. Review the documentation that came with your motherboard. Become familiar with component placement, requirements, and precautions.
2. Confirm that the power supply is disconnected and lay the chassis on a flat surface.
3. Open the chassis cover.

4. Remove any packaging from the chassis. If the rear fans (set of two fans nearest the I/O slots) or the air shroud is in place, remove them.
5. If required by your motherboard, install standoffs in any areas that do not have a permanent standoff. To do this, tighten a hexagonal optional standoff into the chassis.
6. Lay the motherboard on the chassis aligning the permanent and optional standoffs.
7. Secure the motherboard to the chassis using the rounded, Phillips head screws. Do not exceed eight pounds of torque per square inch when tightening down the motherboard.
8. Secure the CPU(s) and heatsinks to the motherboard.

Power Supply Connections

Connect each of the following cables, as required, by your motherboard manufacturer. In some instances, some cables may not need to be connected.

| Power Supply Cables | | | |
|---------------------------------|---------------|---------------------|---|
| Name | Number | Connects to: | Description |
| 20-pin or 24-pin power cable | 1 | Motherboard | 20-pin or 24-pin power cable provides electricity to the motherboard. Has 20 - 24 yellow, black, gray, red, orange, green and blue wires. |
| HDD (Hard Drive) power cable | 3 | Backplane | Each cable has 3 connectors (two Hard Drive [HDD] Attach the HDD connectors to the backplane. . |
| 8-pin motherboard cable | 1 | Motherboard | Provides power to the motherboard CPU. This cable has 2 black and 2 yellow wires. |
| 4-pin motherboard cable | 1 | Motherboard | Provides power to PCI expansion card. This cable has 2 black and 2 yellow wires. |
| 5-pin SMBus power cable (small) | 1 | Motherboard | Allows the SM (System Management) Bus to monitor power supply |
| 2-pin INT cable | 1 | Motherboard | Intrusion detection cable allows the system to log when the server chassis has been opened. |

I/O Shield and Expansion Card Setup

The SC836 chassis includes space for an I/O shield and up to seven add-on/expansion cards.

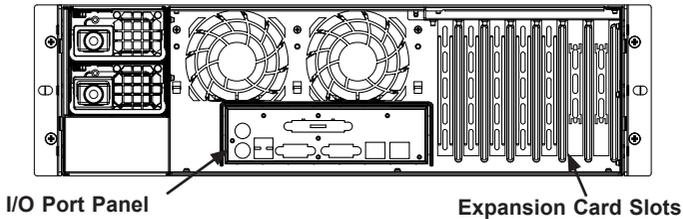


Figure 5-4: SC836 Chassis Rear Expansion Card Slots and I/O Ports

Installing an I/O Port Panel

Installing the I/O Panel

1. Remove the chassis cover.
2. Locate the I/O port panel.
3. Depending on your motherboard, you must remove the existing port shield and replace with the new one or use the existing the shield to slide the ports through.
4. Connect the port panel to the motherboard following the motherboard documentation.

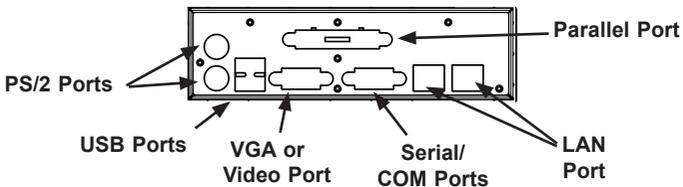


Figure 5-5: SC836 Chassis Port Panel

Installing an Expansion Card

Installing Expansion Cards

1. Remove the chassis cover.
2. Locate the motherboard port aligned with the card slot you want to install.
3. Each slot is secured by one screw located on the top (inside) the chassis. Remove this screw.
4. Remove the add-on/ expansion slot cover.
5. Gently slide the expansion card into the correct motherboard slot. If the expansion card requires a riser card, install it at this time. If necessary, slide the card into the PCI card guide and lock. Never force a component into a motherboard or the chassis.
6. Secure the expansion card with the screw from the I/O panel.

5-6 Installing the Air Shroud, Rear Fan, and Checking Air Flow

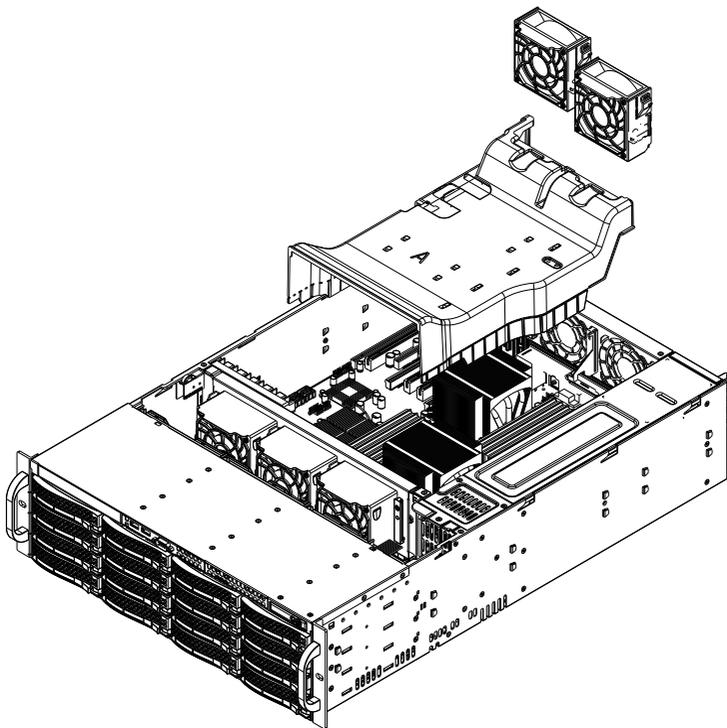


Figure 5-6: Place the Air Shroud

Air shrouds concentrate airflow to maximize fan efficiency. The SC836 chassis air shroud does not require screws to set up.

Installing the Air Shroud

Air Shroud Installation

1. Remove the chassis cover. If necessary, remove the rear fans.
2. Place the air shroud in the chassis, as illustrated. The shroud aligns with the fan holders and covers two of the front fans with two of the rear fans. Make sure the air shroud aligns completely with the chassis.

Installing Rear System Fans

The SC836 chassis includes three front fans and two rear fans. The front fans are pre-installed. The rear fans must be installed after motherboard and air shroud setup.

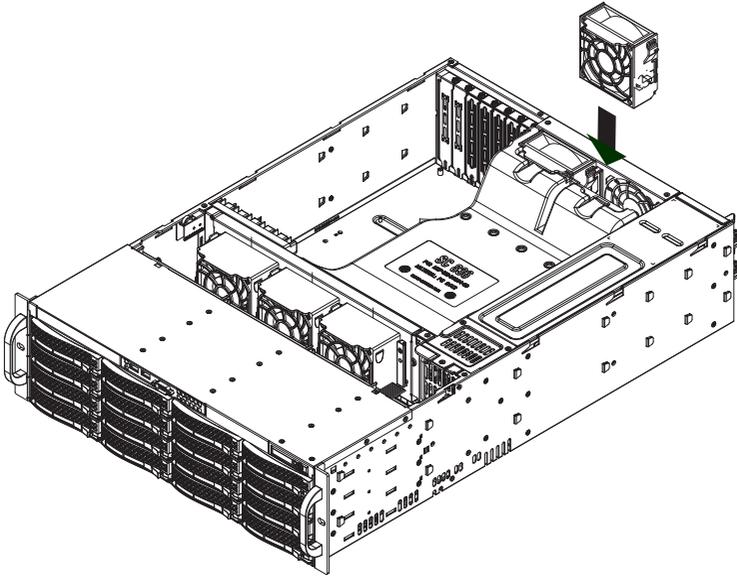


Figure 5-7: Install the Rear Fan

Installing Rear Fans

1. Confirm that the air shroud is correctly placed.
2. Slide the rear fan into the slot as illustrated. The fan release tab should be on the side closest to the power supply.
3. Make sure that the fan is secure in the fan housing and the housing is correctly connected to the power supply.

Checking the Server's Air Flow

Checking the Air Flow

1. Make sure there are no objects to obstruct airflow in and out of the server. If necessary, route the cables through the cable rack.
2. Do not operate the server without drives or drive trays in the drive bays.
3. Use only recommended server parts.
4. Make sure no wires or foreign objects obstruct air flow through the chassis. Pull all excess cabling out of the airflow path or use shorter cables.
5. Do not operate the server for extended periods of time without the air shroud in the proper place.

5-7 Chassis Maintenance

Replacing a System Fans

Five heavy duty fans provide cooling for the chassis. These fans circulate air through the chassis as a means of lowering the chassis' internal temperature. The SC836 Chassis includes three front fans and two rear fans.

SC836 chassis fans are fully hotswappable. In other words, fans may be removed and replaced without having to power down the server.

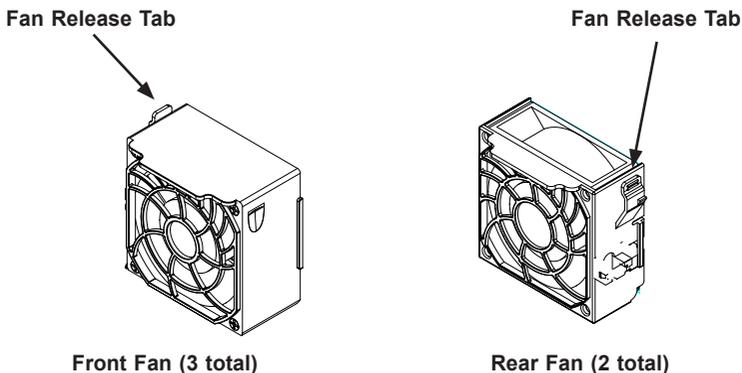


Figure 5-8: Chassis Fans

Replacing Fans

1. Open the chassis and locate the faulty fan. Never run the server for an extended period of time with the chassis open.
2. Press the release tab on the fan and pull the fan upward.
3. Slide the new fan into the fan housing. Make sure the power connectors are correctly aligned. The new fan will be immediately active.

Replacing the Power Supply

The power supply for the SC836 Chassis is redundant and hot swappable, meaning the power supply can be changed without powering down the system.

Replacing a Power Supply Module

1. The SC836 chassis includes a redundant power supply (at least two power modules), you can leave the server running if you remove only one power supply at a time.
2. Unplug the power supply that you will replace.
3. Push the release tab (on the back of the power supply) as illustrated.
4. Pull the power supply out using the handle provided.
5. Replace the failed power module with the same model.
6. Push the new power supply module into the power bay until you hear a click.
7. Plug the AC power cord back into the module and power up the server.

Replacing the Power Distributor

Redundant server chassis that are 2U or more in height require a power distributor. The power distributor provides failover and power supply redundancy. In the unlikely event you must replace the power distributor, do following

Power Distributor Replacement

1. Power-down the server and remove the plug from the wall socket or power strip.
2. Remove all cable connections from the power supply to the motherboard, backplane, and other components. Also, remove both power supplies.
3. Locate the power distributor between the power supply and the fan row.
4. Remove the three screws securing the power supply.
5. Gently pull the power distributor from the chassis. Make the guide all the cables through the power distributor housing.
6. Slide the new power distributor module into the power distributor housing. Make that you slide the cables through the bottom of the housing.
7. Reconnect all the power cables, replace the power supply, and insert the plug into the wall.

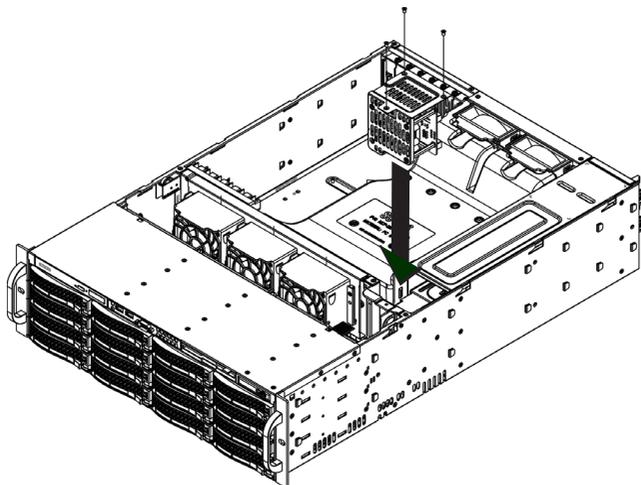


Figure 5-9: Removing the Power Distributor

Replacing the Front Panel

SC836 chassis models include a slim DVD-ROM, optional floppy drive and front port panel. Use the instructions in this section in the unlikely event that you must replace any of these components.

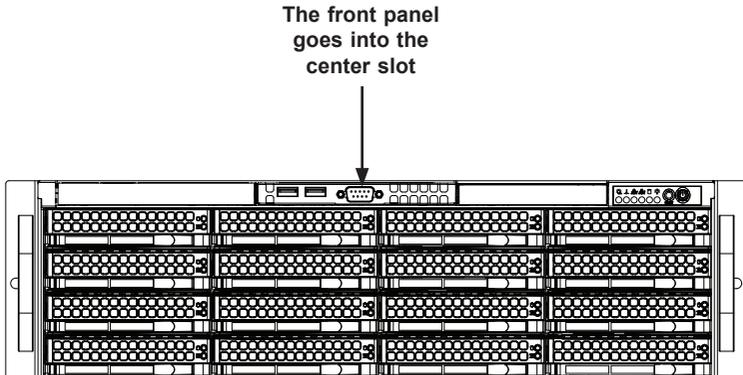


Figure 5-10: Installing the DVD-ROM, Optional Floppy Drive and Front Panel

Replacing or Installing the Front Port Panel

Installing the Front Panel

1. Power down and unplug the system.
2. Remove the chassis cover.
3. **(If you are not installing a new front port panel)** Remove the mini-bezel (grate) from the drive bay. The mini-bezel is the small grating that covers the drive bay. Remove this by simply pulling it out of the bay.
(If you are installing a new front port panel) Remove the old front port panel by depressing the release tab, then pulling the front port panel out of the chassis.
4. Insert the new unit in the slot until the tab locks into place.
5. Connect the data and power cables to the backplane and, if necessary, motherboard.
6. For more information, see the manual for your backplane in the appendix.

Notes

Chapter 6

Advanced Setup

6-1 Overview

This chapter covers the steps required to take advantage of the dual port, failover, and cascading features available with the SAS-836EL series backplanes.

If you are not using a SAS-836EL series backplane or you do not want to take advantage of the advanced features, you may skip this chapter

Specific examples and cascading instructions can be found in the backplane appendices of this manual



Review the warnings and precautions listed in the manual before setting up or servicing this chassis. These include information in Chapter 2: System Safety and the warning/precautions listed in the setup instructions.

6-2 Dual Port and Expanders



Single Ports

SAS-836EL1 backplanes have a single-port expander that access all sixteen drives and supports cascading.

Dual Ports

SAS-836EL2 backplanes have dual-port expanders that access all 16 drives. These dual-port expanders supports cascading, failover and recovery.

Note: Both 836EL series backplanes support SAS drives only.

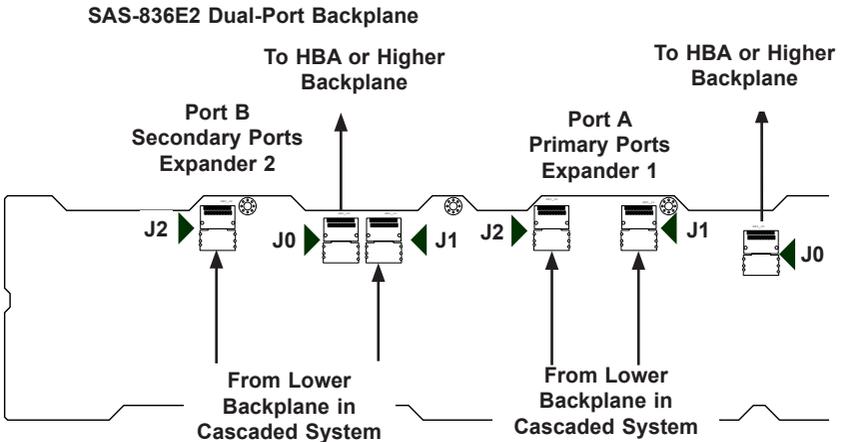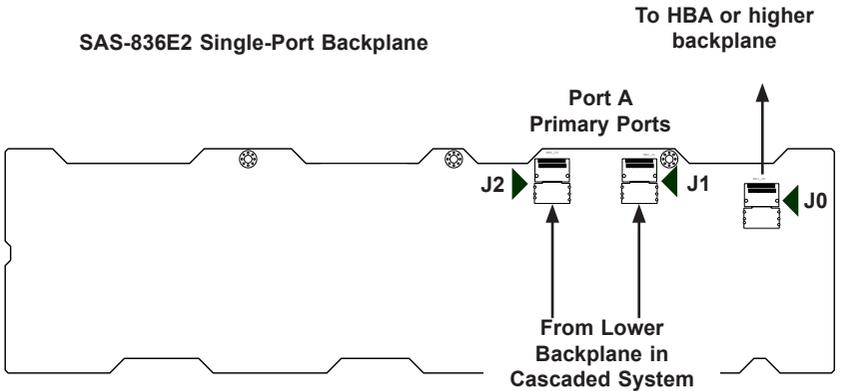


6-3 Failover

Failover is the ability to automatically switch to a redundant path when a primary path fails or becomes unavailable. Failover is automatic and requires no action on the part of the administrator.

The SAS-836EL2 backplane has two expanders which allow effective failover and recovery. This feature is not supported by the SAS-836EL1 backplane.


Single Host Bus Adapter

In a single host bus configuration, the backplane connects to one Host Bus Adapter (HBA).

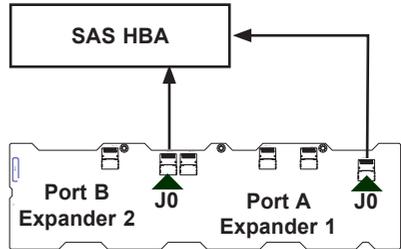


Single Host Bus Adapter Failover

If the eExpander or data path in Port A fails, the system will automatically fail over to Port B.

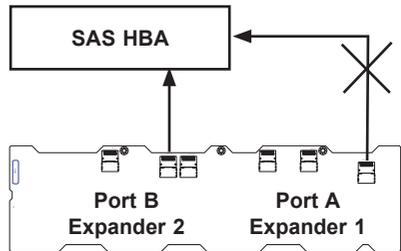


Dual Host Bus Adapter

In a dual host bus configuration, the backplane connects to two HBAs.

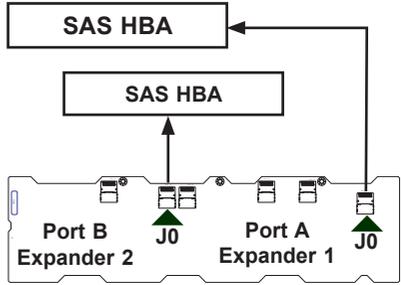

Dual Host Bus Adapter Failover

If the expander or data path in Port A fails, the system will automatically fail over to Port B. This maintains a full connection to all drives.

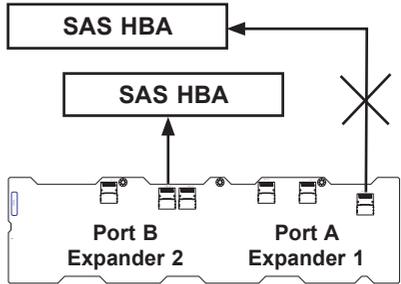

6-4 Cascading Backplanes

The SC836 chassis supports cascading when coupled with a SAS-836EL series backplane or other Supermicro backplane with expander capabilities.

Power Control Card

In a cascaded configuration, backplanes can be linked to create "Just a Bunch of Drives" or JBOD. The primary server requires a host bus adapter (or motherboard). The other servers require a control card or power card.

Chapter 7

Rack Installation

7-1 Overview

This chapter provides a quick setup checklist to get your chassis up and running. Following these steps in the order given should enable you to have the system operational within a minimal amount of time.

7-2 Unpacking the System

You should inspect the box which the chassis was shipped in and note if it was damaged in any way. If the chassis itself shows damage, you should file a damage claim with the carrier who delivered it.

Decide on a suitable location for the rack unit that will hold your chassis. It should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated. The system needs to be placed near a grounded power outlet. Be sure to read the Rack and Server Precautions in the next section.

7-3 Preparing for Setup

The box your chassis was shipped in should include two sets of rail assemblies and the mounting screws needed for installing the system into the rack. Also included is an optional square hole to round hole converter bracket, for use in racks with round mounting holes. *Please read this section in its entirety before you begin the installation procedure outlined in the sections that follow.*

Choosing a Setup Location

- Leave enough clearance in front of the rack to enable you to open the front door completely (~25 inches).
- Leave approximately 30 inches of clearance in the back of the rack to allow for sufficient airflow and ease in servicing.
- This product is for installation only in a Restricted Access Location (dedicated equipment rooms, service closets and the like).



Warning!



7-4 Warnings and Precautions

Rack Precautions

- Ensure that the leveling jacks on the bottom of the rack are fully extended to the floor with the full weight of the rack resting on them.
- In single rack installations, stabilizers should be attached to the rack.
- In multiple rack installations, the racks should be coupled together.
- Always make sure that the rack is stable before extending a component from the rack.
- You should extend only one component at a time - extending two or more simultaneously may cause the rack to become unstable.

General Server Precautions

- Review the electrical and general safety precautions that came with the components you are adding to your chassis.
- Determine the placement of each component in the rack *before* you install the rails.
- Install the heaviest server components on the bottom of the rack first, and then work upwards.
- Use a regulating uninterruptible power supply (UPS) to protect the server from power surges, voltage spikes and to keep your system operating in case of a power failure.
- Allow the hot plug hard drives and power supply modules to cool before touching them.

- Always keep the rack's front door and all panels and components on the servers closed when not servicing to maintain proper cooling.

7-5 Rack Mounting Considerations

Ambient Operating Temperature

If installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the ambient temperature of the room. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (TMRA).

Reduced Airflow

Equipment should be mounted into a rack so that the amount of airflow required for safe operation is not compromised.

Mechanical Loading

Equipment should be mounted into a rack so that a hazardous condition does not arise due to uneven mechanical loading.

Circuit Overloading

Consideration should be given to the connection of the equipment to the power supply circuitry and the effect that any possible overloading of circuits might have on overcurrent protection and power supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

Reliable Ground

A reliable ground must be maintained at all times. To ensure this, the rack itself should be grounded. Particular attention should be given to power supply connections other than the direct connections to the branch circuit (i.e. the use of power strips, etc.).

7-6 Rack Mounting Instructions

This section provides information on installing the chassis into a rack unit with the rails provided. There are a variety of rack units on the market, which may mean that the assembly procedure will differ slightly from the instructions provided. You should also refer to the installation instructions that came with the rack unit you are using. **NOTE:** This rail will fit a rack between 26.5" and 36.4" deep.

Identifying the Sections of the Rack Rails

The chassis package includes two rail assemblies in the rack mounting kit. Each assembly consists of three sections: An inner chassis rail which secures directly to the chassis, an outer rail that secures to the rack, and a middle rail which extends from the outer rail. These assemblies are specifically designed for the left and right side of the chassis.

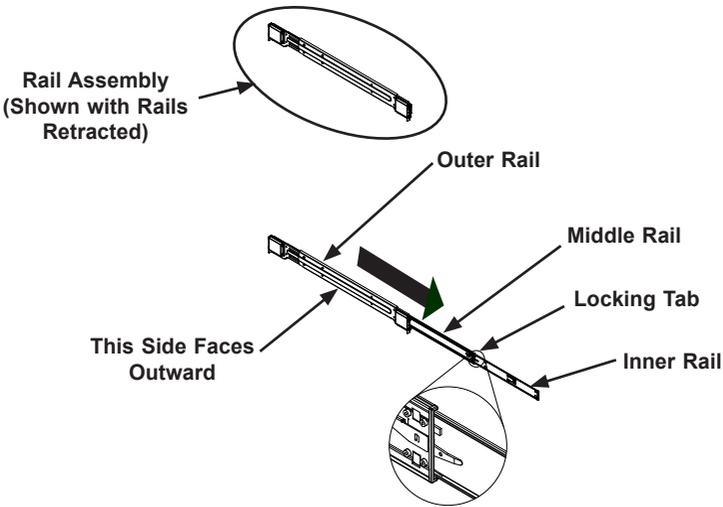


Figure 7-1: Identifying the Outer Rail, Middle Rail and Inner Rails (Left Rail Assembly Shown)

Locking Tabs

Each inner rail has a locking tab. This tab locks the chassis into place when installed and pushed fully into the rack. These tabs also lock the chassis in place when fully extended from the rack. This prevents the server from coming completely out of the rack when the chassis is pulled out for servicing.

Releasing the Inner Rail

Releasing Inner Rail from the Outer Rails

1. Identify the left and right outer rail assemblies as described on page 5-4.
2. Pull the inner rail out of the outer rail until it is fully extended as illustrated below.
3. Press the locking tab down to release the inner rail.
4. Repeat steps 1-3 for the second outer rail.

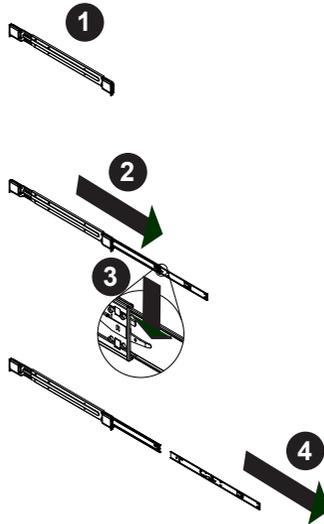


Figure 7-2: Extending and Releasing the Inner Rail

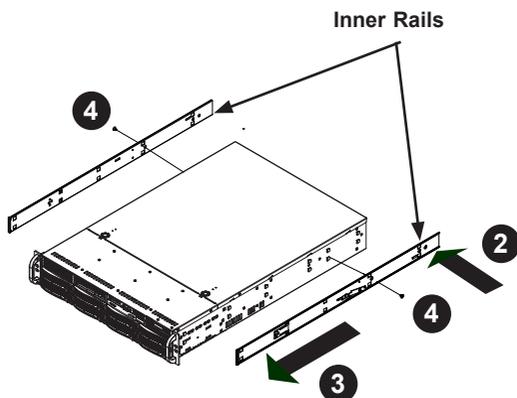


Figure 7-3: Installing the Inner Rails

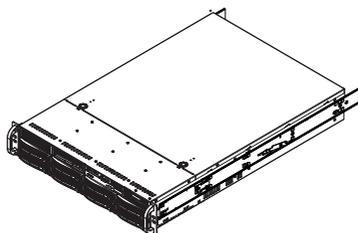


Figure 7-4: Inner Rails Installed on the Chassis
(The chassis above are an example only. Actual chassis may differ slightly)

Installing The Inner Rails on the Chassis

Installing the Inner Rails

1. Confirm that the left and right inner rails have been correctly identified.
2. Place the inner rail firmly against the side of the chassis, aligning the hooks on the side of the chassis with the holes in the inner rail.
3. Slide the inner rail forward toward the front of the chassis until the rail clicks into the locked position, which secures the inner rail to the chassis.
4. Secure the inner rail to the chassis with the screws provided.
5. Repeat steps 1 through 4 above for the other inner rail.

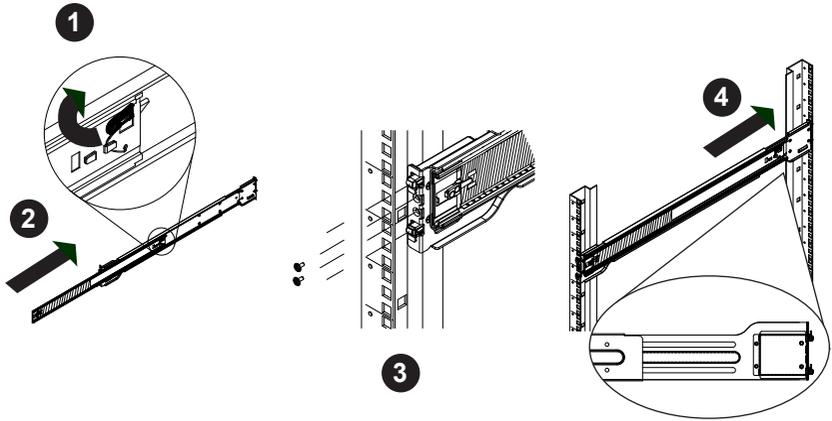


Figure 7-5: Extending and Releasing the Outer Rails

Installing the Outer Rails on the Rack

Installing the Outer Rails

1. Press upward on the locking tab at the rear end of the middle rail.
2. Push the middle rail back into the outer rail.
3. Hang the hooks of the front of the outer rail onto the slots on the front of the rack. If necessary, use screws to secure the outer rails to the rack, as illustrated above.
4. Pull out the rear of the outer rail, adjusting the length until it fits within the posts of the rack.
5. Hang the hooks of the rear portion of the outer rail onto the slots on the rear of the rack. If necessary, use screws to secure the rear of the outer rail to the rear of the rack.
6. Repeat steps 1-5 for the remaining outer rail.

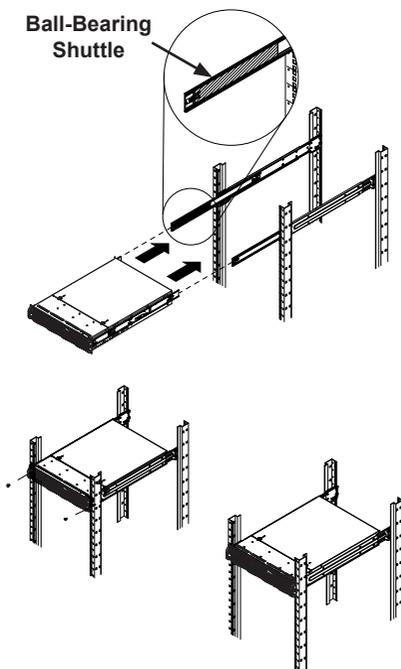


Figure 7-6: Installing into a Rack

Standard Chassis Installation

Installing the Chassis into a Rack

1. Confirm that the inner rails are properly installed on the chassis.
2. Confirm that the outer rails are correctly installed on the rack.
3. Pull the middle rail out from the front of the outer rail and make sure that the ball-bearing shuttle is at the front locking position of the middle rail.
4. Align the chassis inner rails with the front of the middle rails.
5. Slide the inner rails on the chassis into the middle rails, keeping the pressure even on both sides, until the locking tab of the inner rail clicks into the front of the middle rail, locking the chassis into the fully extended position.
6. Depress the locking tabs of both sides at the same time and push the chassis all the way into the rear of the rack.
7. If necessary for security purposes, use screws to secure the chassis handles to the front of the rack.

Optional Quick Installation Method

The following quick installation method may be used to install the chassis onto a rack.

Installing the Chassis into a Rack

1. Install the whole rail assembly onto the rack as described on page 7-7.
2. Release the inner rail without retracting the middle rail.
3. Install the inner rails on the chassis as previously described on page 7-6.
4. Install the chassis onto the middle rail as described in the previous section.

Notes

Appendix A

SC836 Chassis Cables

A-1 Overview

This appendix lists supported cables for your chassis system. It only includes the most commonly used components and configurations. For more compatible cables, refer to the manufacturer of the motherboard you are using and our Web site at: www.supermicro.com.

A-2 Cables Included with SC836 Chassis (SAS/SATA)

| SC836TQ-800 | | | |
|--------------|---------------|---------|--|
| Part # | Type | Length | Description |
| CBL-0087 | Ribbon, Round | 20" | 16 pin to 16 pin ribbon cable for control panel |
| CBL-0179L | Cable | 70mm | SATA cable |
| - | Cable | 6' | Regional power cord |
| CBL-0180L-01 | SATA | various | Set for 4 SATA cables. length varied to minimize airflow interference. |
| CBL-0139L | Wire | 45cm | IDE 80-wire cable for DVD-ROM |

| SC836S-800 | | | |
|---------------|-------|--------|-------------------------------|
| Part # | Type | Length | Description |
| CBL-033L-U320 | Cable | 9' | 9" 2-drop U320 SCSI cable |
| CBL-0063L | Cable | 20" | 20" SCSI cable |
| CBL-0139L | Wire | 45cm | IDE 80-wire cable for DVD-ROM |
| CBL-0160L | Cord | --- | Power cord |

| SC836E-800 | | | |
|-------------------|------------------|---------------|---|
| Part # | Type | Length | Description |
| CBL-0087 | Ribbon, Round | 20" | 16 pin to 16 pin ribbon cable for control panel |
| CBL-0179L | Cable | 70mm | SATA cable |
| - | Cable | 6' | Regional power cord |
| CBL-0139L | Wire | 45cm | IDE 80-wire cable for DVD-ROM |

| SC836A-1200 | | | |
|--------------------|------------------|---------------|---|
| Part # | Type | Length | Description |
| CBL-0087 | Ribbon, Round | 20" | 16 pin to 16 pin ribbon cable for control panel |

A-4 Compatible Cables

This section lists cables included with the SC836 chassis packages

Alternate SAS Cables

Some compatible motherboards have different connectors. If your motherboard has only one SAS connector that the SAS cables must share, use one of the following cables. These cables must be purchased separately.

Cable Name: SAS Cable **Quantity:** 1

Part #: CBL-0175L

Alt. Name: "Big Four"

Description: This cable has one SFF-8484 (32 pin) connector on one end and four SAS connectors (7 pins each) at the other. This cable connects from the host (motherboard or other controller) to the backplane SAS hard drive port.

Cable Name: SAS Cable **Quantity:** 1

Part #: CBL-0116

Alt. Name: iPass or "Small Four"

Description: This cable has one ipass (SFF-8087/mini-sas) connector (36 pins) at one end and four SAS connectors on one end. This cable connects from the host (motherboard or other controller) to the backplane SAS hard drive port.

Cascading/JBOD SAS Cables

Use the following cables when setting up a cascading or JBOD system.



Cable Name: SAS Cable **Quantity:** varies by setup

Part #: CBL-0167L

Ports: Single

Placement: Internal cable

Description: Internal cable. Connects the backplane to the Host Bus Adapter (HBA) or external port. Used in single port environments.



Cable Name: SAS Cable

Quantity: varies by setup

Part #: CBL-0168L

Placement: Internal cable

Ports: Dual

Description: Internal cascading cable. Connects the backplane to the Host Bus Adapter (HBA) or external port. Used in dual port environments.



Cable Name: SAS Cable

Quantity: varies by setup

Part #: CBL-0166L

Placement: External cable

Ports: Single or Dual

Description: External cascading cable. Connects ports between servers. With most connectors, use one cable for single port connections and two cables for dual port connections.

Extending Power Cables

Although Super Micro chassis are designed with to be efficient and cost-effective, some compatible motherboards have power connectors located in different areas.

To use these motherboards you may have to extend the power cables to the motherboards. To do this, use the following chart as a guide.

| Power Cable Extenders | | |
|------------------------------|---------------------|---------------|
| Number of Pins | Cable Part # | Length |
| 24 pin | CBL - 0042 | 7.9"(20 CM) |
| 20 pin | CBL - 0059 | 7.9"(20 CM) |
| 8 pin | CBL - 0062 | 7.9"(20 CM) |
| 4 pin | CBL - 0060 | 7.9"(20 CM) |

Front Panel to the Motherboard

The SC836 chassis includes a cable to connect the chassis front panel to the motherboard. If your motherboard uses a different connector, use the following list to find a compatible cable.

| Front Panel to Motherboard Cable (Ribbon Cable) | | |
|--|-------------------------------------|---------------------|
| Number of Pins (Front Panel) | Number of Pins (Motherboard) | Cable Part # |
| 16 pin | 16 pin | CBL - 0049 |
| 16 pin | 20 pin | CBL - 0048 |
| 20 pin | 20 pin | CBL - 0047 |
| 16 pin | various* | CBL - 0068 |
| 20 pin | various* | CBL - 0067 |

* Split cables: Use these cable if your motherboard requires several different connections from the front panel.

Notes

Appendix B

SC836 Power Supply Specifications

This appendix lists power supply specifications for your chassis system.

| 1200W (Redundant) | |
|-------------------------------|---|
| AC Input | 100 - 140V, 50 - 60Hz, 8 - 11.5 Amp 180 - 240V, 50 - 60Hz, 5.5 - 8 Amp |
| DC Output +12V | 1000W, 83 Amp @ 100-140V 1200W, 100 Amp @ 180-240V 5Vsb: 4A |
| DC Output with PDB | +5V: 50 Amp +3.3V: 30 Amp -12V: 0.6 Amp |
| 800W (Redundant) | |
| MFR Part # | PWS-801-1R |
| Rated AC Voltage | 100 - 240V 50 - 60Hz 10A - 4 Amp |
| +5V standby | 4 Amp |
| +12V | 66 Amp |
| +5V | 25 Amp |
| +3.3V | 12 Amp |
| -12V | 0.5 Amp |

| 710W (Redundant) | |
|-------------------------------|---|
| MFR Part # | PWS-711-1R |
| Rated DC Input Voltage | Voltage Range: -36 to -75V (24A-11A) Nominal Voltage: -48V |
| +5V standby | 4 Amp |
| +12V | 58 Amp |
| +5V | 24 Amp |
| +3.3V | 21 Amp |
| -12V | 0.6 Amp |

Appendix C

SAS-836EL Backplane Specifications

To avoid personal injury and property damage, carefully follow all the safety steps listed below when accessing your system or handling the components.

C-1 ESD Safety Guidelines

Electrostatic Discharge (ESD) can damage electronic components. To prevent damage to your system, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing a component from the antistatic bag.
- Handle the backplane by its edges only; do not touch its components, peripheral chips, memory modules or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the card and peripherals back into their antistatic bags when not in use.

C-2 General Safety Guidelines

- Always disconnect power cables before installing or removing any components from the computer, including the backplane.
- Disconnect the power cable before installing or removing any cables from the backplane.
- Make sure that the backplane is securely and properly installed on the motherboard to prevent damage to the system due to power shortage.

C-3 An Important Note to Users

- All images and layouts shown in this user's guide are based upon the latest PCB Revision available at the time of publishing. The card you have received may or may not look exactly the same as the graphics shown in this manual.

C-4 Introduction to the SAS-836EL Backplane

The SAS-836EL backplane has been designed to utilize the most up-to-date technology available, providing your system with reliable, high-quality performance.

This manual reflects SAS-836EL Revision 1.01 the most current release available at the time of publication. Always refer to the Supermicro Web site at www.supermicro.com for the latest updates, compatible parts and supported configurations.

Jumper Settings and Pin Definitions

C-4 Front Connectors and Jumpers

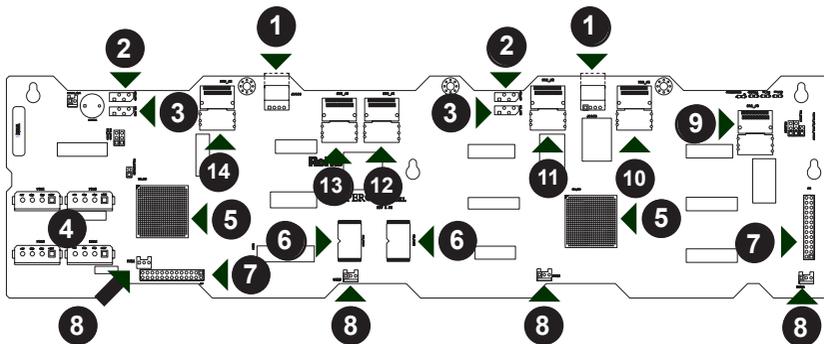


Figure C-1: SAS-836EL2 Backplane

Front Connectors

- | | |
|---|--|
| 1. CD-ROM/Drive Power: JP105 and JP106 | Fan4 (Fan1 is not used) |
| 2 and 3. Primary and Secondary I ² C connectors (optional) | 9. SAS Connectors: PRI_J0 |
| 4. Power Connectors: PWR0, PWR1, PWR2, and PWR3 | 10. SAS Connectors: PRI_J1 |
| 5. Primary and Secondary Expander Chip | 11. SAS Connectors: PRI_J2 |
| 6. Primary and Secondary Flash Chip | 12. SAS Connectors: SEC_J1 (not available in EL1 single port backplanes) |
| 7. EPP Connectors: J16 and J17 | 13. SAS Connectors: SEC_J0 (not available in EL1 single port backplanes) |
| 8. Fan Connectors: Fan2, Fan3, and | 14. SAS Connectors: SEC_J2 (not available in EL1 single port backplanes) |

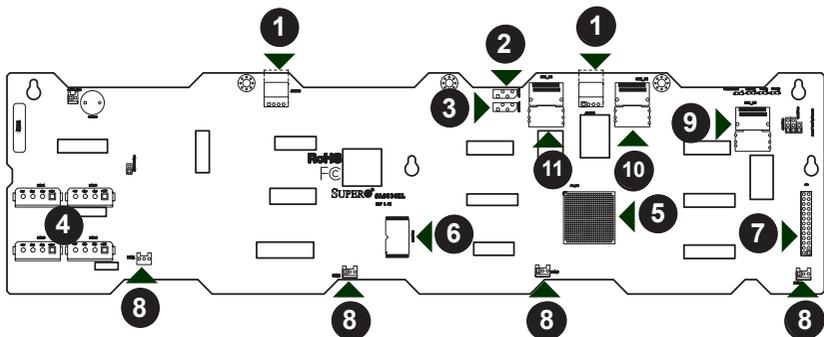


Figure C-2: SAS-836EL1 Backplane

C-5 Front Connector and Pin Definitions

1. CD-ROM/4-Pin Connectors

The 4-pin connectors, designated JP105 and JP106, provide power to the CD-ROM drive. See the table on the right for pin definitions.

| CD-ROM/ FDD Power 4-Pin Connector (JP105 and JP106) | |
|--|--------|
| Pin# Definition | |
| 1 | +5V |
| 2 and 3 | Ground |
| 4 | +12V |

2 and 3. Primary and Secondary I²C Connectors

The I²C Connectors are used to monitor hard drive activity and status through LED. See the table on the right for pin definitions. There are four total connectors--two primary and two secondary.

| I ² C Connector Pin Definitions | |
|---|---------------|
| Pin# Definition | |
| 1 | Data |
| 2 | Ground |
| 3 | Clock |
| 4 | No Connection |

Note: These connectors are optional and should only be used by qualified technicians.

4. Backplane Main Power Connectors

The 4-pin connectors, designated PWR0, PWR1, PWR2, and PWR3, provide power to the backplane. See the table on the right for pin definitions.

| Backplane Main Power 4-Pin Connector | |
|--|--------|
| Pin# Definition | |
| 1 | +12V |
| 2 and 3 | Ground |
| 4 | +5V |

5. Primary and Secondary Expander Chips

This Primary and Secondary Expander Chips allow the backplane to support dual ports, cascading, and failover.

6. Primary and Secondary Flash Chips

The Primary and Secondary Flash Chips enhance the backplane memory.

7. EPP Ports

The EPP ports are used for manufacturer diagnostic purposes only.

8. Fan Connectors

The 3-pin connectors, designated Fan2, Fan3, and Fan4, provide power to the fans.

A fan may be connected to Fan1; however, connector Fan1 is not fully supported by the backplane. Any fan connected to Fan1 will not be monitored.

| Fan Connectors | |
|----------------|------------|
| Pin# | Definition |
| 1 | Ground |
| 2 | +12V |
| 3 | Tachometer |

See the table on the right for pin definitions.

9-14. SAS Ports

This backplane supports SAS drives only.

Note that the Primary and Secondary sets of SAS ports are in different order. From right to left the ports are Primary 0, 1, 2 and Secondary 1, 0, 2.

C-6 Front Jumper Locations and Pin Definitions


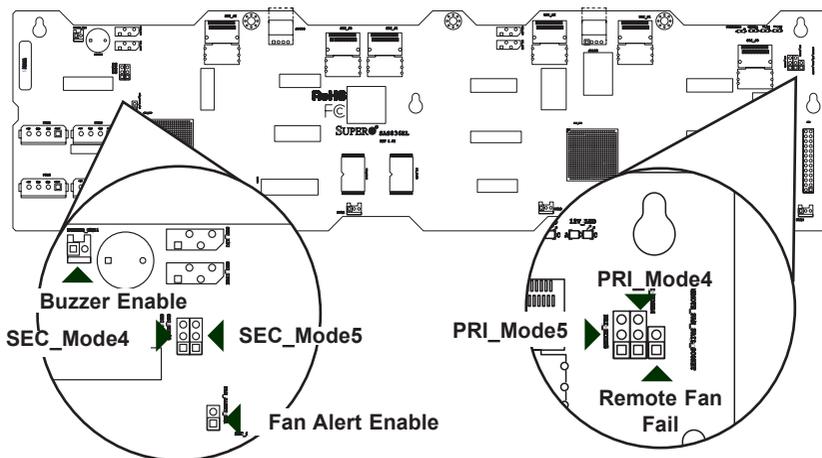


Figure C-3: Backplane Jumper Settings

Explanation of Jumpers

To modify the operation of the backplane, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board. Note: On two pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

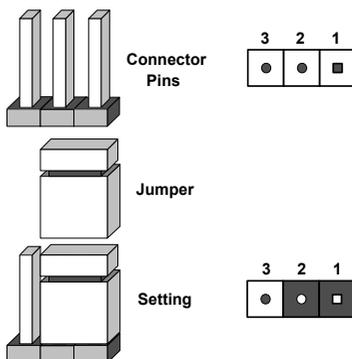

| General Jumper Settings | | |
|-------------------------|-----------------|----------------------------------|
| Jumper | Jumper Settings | Note |
| PRI_MODE4 | 1-2 | Factory setting Do not change |
| PRI_MODE5 | 2-3 | Factory setting Do not change |
| SEC_MODE4 | 1-2 | Factory setting Do not change |
| SEC_MODE5 | 2-3 | Factory setting Do not change |

| General Jumper Settings | | |
|-------------------------|---------------------------------|------------------|
| Jumper | Jumper Settings | Description |
| BUZZER_ENB1 | Open: Disable Closed: Enable | Buzzer enable* |
| FAN_ALERT_ENI | Open: Disable Closed: Enable | Enable fan alert |

| Socket Settings | | |
|------------------------|----------------|---|
| Socket | Socket Setting | Description |
| REMOTE_FAN_FAIL_SOCKET | Connected | Front panel fan fail indicator (Optional) |

*The buzzer sound indicates that a condition requiring immediate attention has occurred.

The buzzer alarm is triggered by the following conditions:

1. Hard drive failure
2. Fan failure
3. System temperature over 45° Celsius.

Front LED Indicators

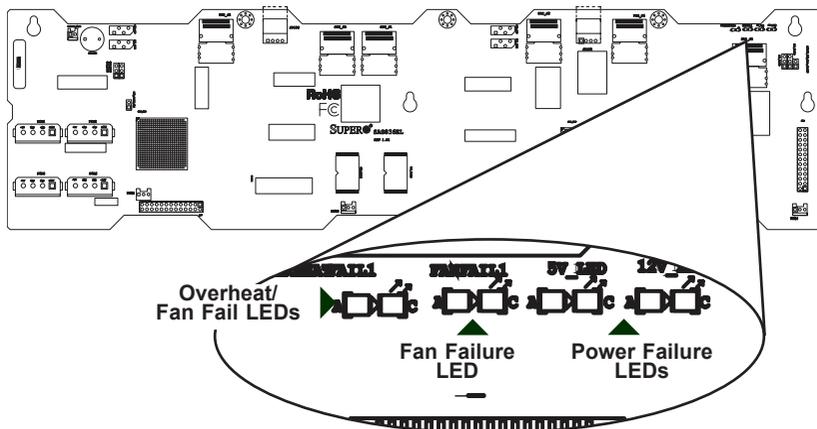


Figure C-4: Backplane LED Indicators

| Backplane LEDs | | |
|----------------|-------|---|
| LED | State | Specification |
| OVERHEATFAIL1 | On | Overheat or drive failure |
| FANFAIL1 | On | Failure in system fans |
| 5V | Off | Backplane power failure. Light is on during normal operation. |
| 12V | Off | Backplane power failure. Light is on during normal operation. |

C-7 Rear Connectors and LED Indicators

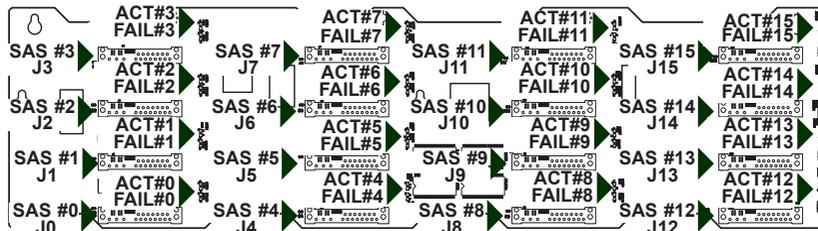


Figure C-5: Rear Connectors and LED Indicators

| Rear SAS Connectors | | | |
|---------------------|------------------|----------------|------------------|
| Rear Connector | SAS Drive Number | Rear Connector | SAS Drive Number |
| SAS #0 | SAS HDD #0 | SAS #8 | SAS HDD #8 |
| SAS #1 | SAS HDD #1 | SAS #9 | SAS HDD #9 |
| SAS #2 | SAS HDD #2 | SAS #10 | SAS HDD #10 |
| SAS #3 | SAS HDD #3 | SAS #11 | SAS HDD #11 |
| SAS #4 | SAS HDD #4 | SAS #12 | SAS HDD #12 |
| SAS #5 | SAS HDD #5 | SAS #13 | SAS HDD #13 |
| SAS #6 | SAS HDD #6 | SAS #14 | SAS HDD #14 |
| SAS #7 | SAS HDD #7 | SAS #15 | SAS HDD #15 |

| Rear LED Indicators | | |
|---------------------|---------------------|-------------|
| Rear LED | Hard Drive Activity | Failure LED |
| SAS #0 | ACT #0 | FAIL #0 |
| SAS #1 | ACT #1 | FAIL #1 |
| SAS #2 | ACT #2 | FAIL #2 |
| SAS #3 | ACT #3 | FAIL #3 |
| SAS #4 | ACT #4 | FAIL #4 |
| SAS #5 | ACT #5 | FAIL #5 |
| SAS #6 | ACT #6 | FAIL #6 |
| SAS #7 | ACT #7 | FAIL #7 |
| SAS #8 | ACT #8 | FAIL #8 |
| SAS #9 | ACT #9 | FAIL #9 |
| SAS #10 | ACT #10 | FAIL #10 |

| Rear LED Indicators | | |
|----------------------------|---------|----------|
| SAS #11 | ACT #11 | FAIL #11 |
| SAS #12 | ACT #12 | FAIL #12 |
| SAS #13 | ACT #13 | FAIL #13 |
| SAS #14 | ACT #14 | FAIL #14 |
| SAS #15 | ACT #15 | FAIL #15 |

Dual Port and Cascading Configurations

C-8 Single and Dual Port Expanders

Single Ports

SAS-836EL1 backplanes have a single-port expander that access all sixteen drives and supports cascading.

Dual Ports

SAS-836EL2 backplanes have dual-port expanders that access all sixteen drives. These dual-port expanders support cascading, failover, and recovery.

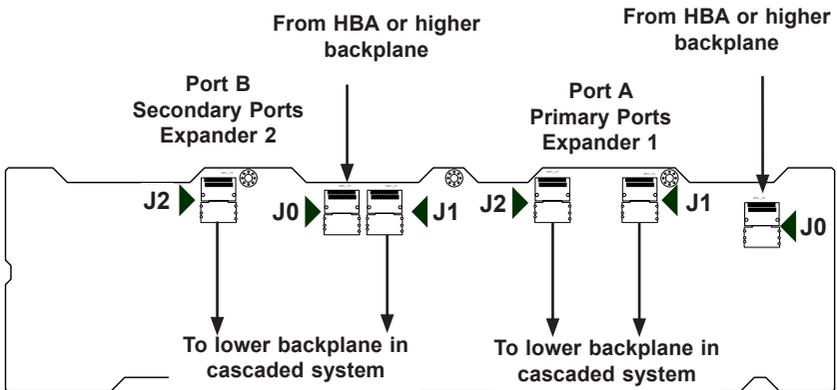


Figure C-6: SAS-836EL2 Dual Port Configuration

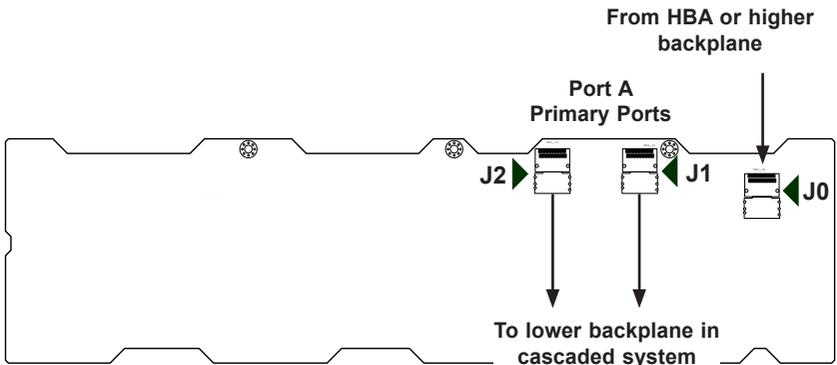


Figure C-7: SAS-836EL1 Single Port Configuration

C-9 Failover

The SAS-836EL2 backplane has two expanders which allow effective failover and recovery.

Single Host Bus Adapter

In a single host bus configuration, the backplane connects to one Host Bus Adapter (HBA).

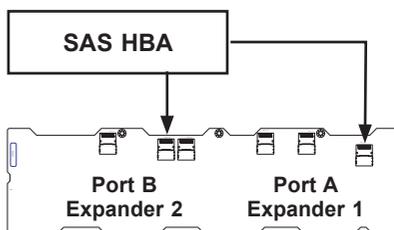


Figure C-8: Single HBA

Single Host Bus Adapter Failover

If the expander or data path in Port A fails, the system automatically switches to Port B.

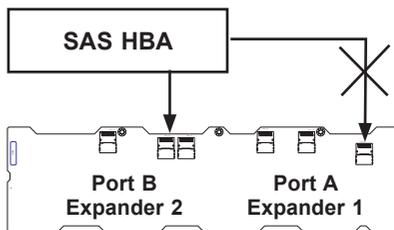


Figure C-9: Single HBA Failover

Dual Host Bus Adapter

In a dual host bus configuration, the backplane connects to two Host Bus Adapters (HBA).

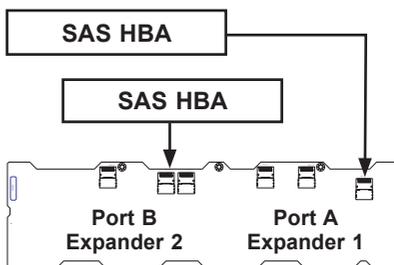


Figure C-10: Dual HBA

Dual Host Bus Adapter Failover

If the expander or data path in Port A fails, the system automatically switches to Port B. This maintains a full connection to all drives.

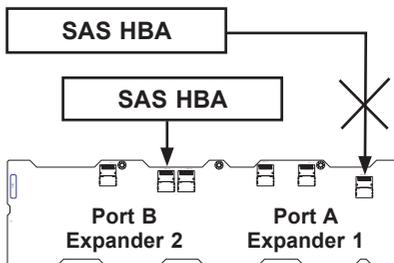


Figure C-11: Dual HBA Failover

C-10 Cables and Chassis Power Card

Chassis Power Card

In a cascaded configuration, the first chassis includes a motherboard and at least one Host Bus Adapter (HBA). Other servers in this enclosed system, include a power card. This section describes the supported power card for the SAS-836 series backplane.

For more information, see the PCC-JBPWR2 power card manual. This manual can be found at the <http://www.supermicro.com> or as an appendix in the SAS-836EL chassis manual.

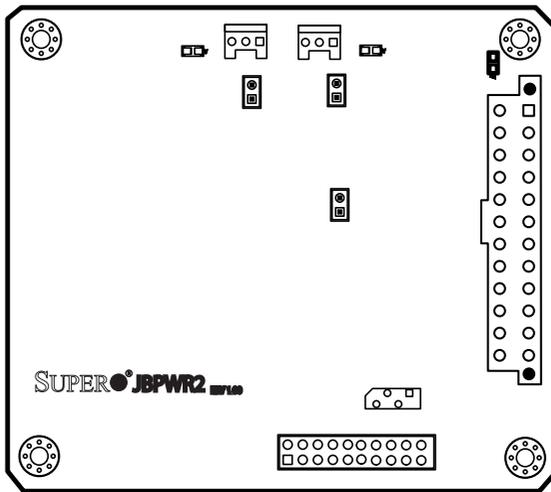


Figure C-12: Chassis Power Card (Sold Separately)

| Power Card | | |
|----------------|------------|---|
| Part Number | Part Type | Where Used |
| CSE-PTJBOD-CB1 | Power Card | Allows the chassis to be in a JBOD (Just a Bunch of Drives) system. |

Connecting an Internal Host Bus Adapter to the Backplane

The following section lists the most common cables used to connect the HBA to the backplane.

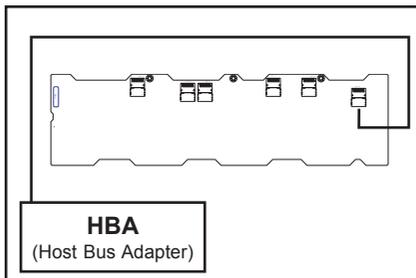


Figure C-13: Single Internal Host Bus Adapter

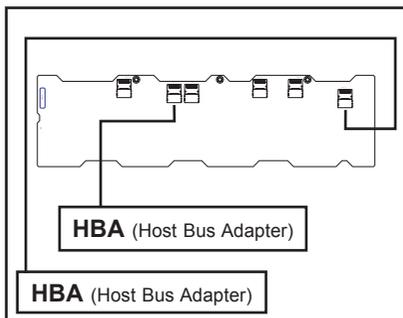


Figure C-14: Dual Internal Host Bus Adapter

Supported Internal HBA to Backplane Cables

Use the following listed cables to create connections between the internal HBA and SAS-836EL backplane. The cables required depend on the HBA connector.

Cable Name: iPass TO 4-LANE

Part #: CBL-0117

Length: 46 cm (18 inches)

Description: This cable has one SFF-8484 (32 pin) connector on one end and iPass (SFF-8087/Mini-SAS) connector (36 pins) at the other. This cable connects from the HBA to the SAS-836EL backplane.

Connecting an External Host Bus Adapter to the Backplane

This backplane supports external Host Bus Adapters. In this configuration, the HBA and the backplane are in different physical chassis. This allows a JBOD (Just a Bunch Of Drives) configuration from an existing system.

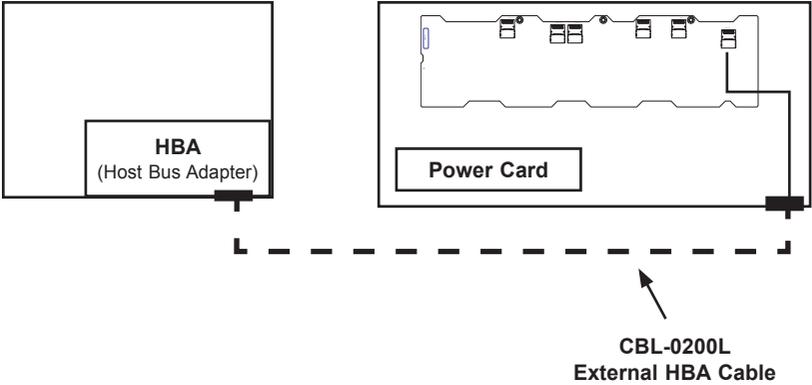


Figure C-15: Single External Host Adapter

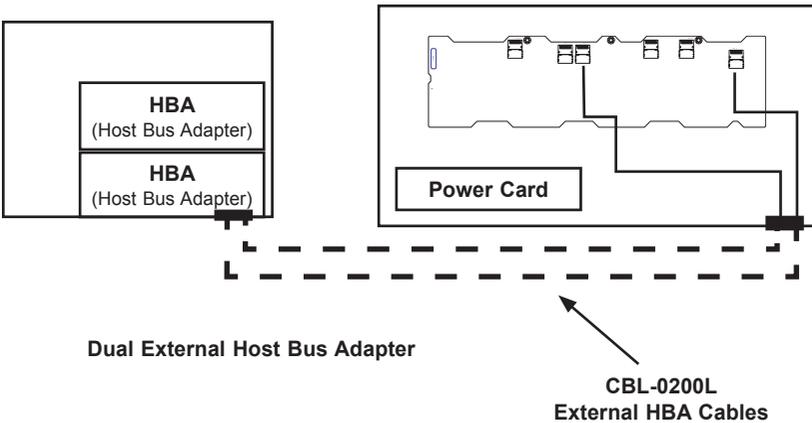


Figure C-16: Dual External Host Bus Adapter

Supported External HBA to Backplane Cable

Use the following cable if your external HBA has an InfiniBand connector.



Figure C-17: SAS InfiniBand Cable (CBL-0200L)

Cable Name: SAS InfiniBand to Mini-SAS X4 1M cable, PBF

Part #: CBL-0200L

Length: 1 meter

Description: This cable has an InfiniBand connector (SFF-8470) on one end and an SFF-8088-1X (26-pins) at the other end.

Connecting Multiple Backplanes in a Single Channel Environment

This section describes the cables used when cascading from a single HBA. These connections use CBL-0167L internal cables and CBL-0166L external cables.

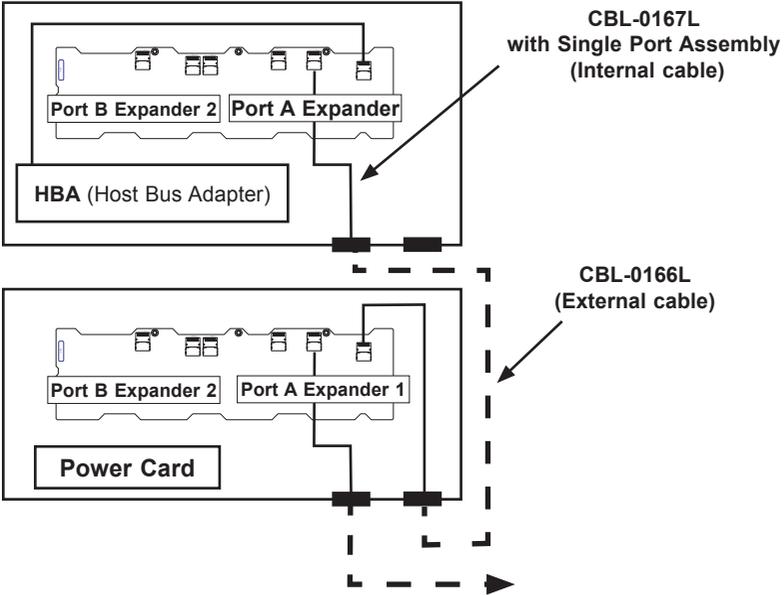


Figure C-18: Single HBA Configuration

Single HBA Configuration Cables

Single Port Cable Assembly

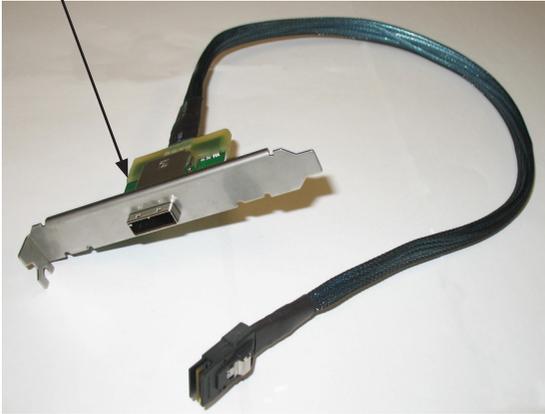


Figure C-19: Single Port Internal Cable (CBL-167L)

Cable Name: SAS EL2/EL1 Backplane Cable (Internal) with 2-port Cascading Cable, 68 cm

Part #: CBL-0167L (SFF-8087 to SFF-8088 x1)

Ports: Single

Placement: Internal cable

Description: Internal cable. Connects the backplane to the Host Bus Adapter (HBA) or external port. Used in single port environments.



Figure C-20: External Cable (CBL-166L)

Cable Name: SAS EL2/EL1 Cascading Cable (External), 68cm

Part #: CBL-0166L (SFF-8088 1x to SFF-8088 x1)

Ports: Single or Dual

Placement: External cable

Description: External cascading cable. Connects ports between servers. With most connectors, use one cable for single port connections and two cables for dual port connections.

Connecting Multiple Backplanes in a Dual Channel Environment

This section describes the cables used when cascading from dual HBAs. These connections use CBL-0168L internal cables and CBL-0166L external cables.

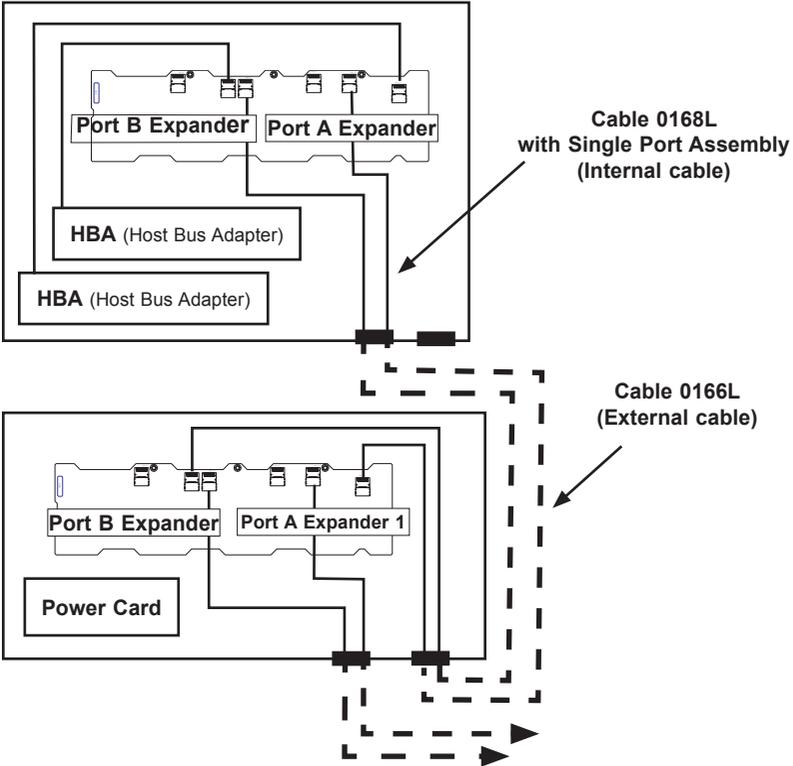


Figure C-21: Dual HBA Configuration

Dual HBA Configuration Cables

Dual Port Cable
Assembly



Figure C-22: Dual Port Internal Cable (CBL-168L)

Cable Name: SAS Dual-port Cable Assembly, 68/76cm

Part #: CBL-0168L

Placement: Internal cable

Ports: Dual

Description: Internal cascading cable. Connects the backplane to the Host Bus Adapter (HBA) or external port. Used in dual port environments.



Figure C-23: External Cable (CBL-166L)

Cable Name: SAS EL2/EL1 Cascading Cable (External), 68cm

Part #: CBL-0166L

Placement: External cable

Ports: Single or dual

Description: External cascading cable. Connects ports between servers. Use one cable for single port connections and two cables for dual port connections.

C-11 Supported Cascading Configurations

Cascading allows the system to access data at a faster rate by allowing several backplanes to share resources to reduce latency time.

The first backplane in a cascaded system requires a motherboard and HBA. Other servers require a power control card with no motherboard and no HBA. For more information, see the SC836 Chassis Manual available at www.supermicro.com.

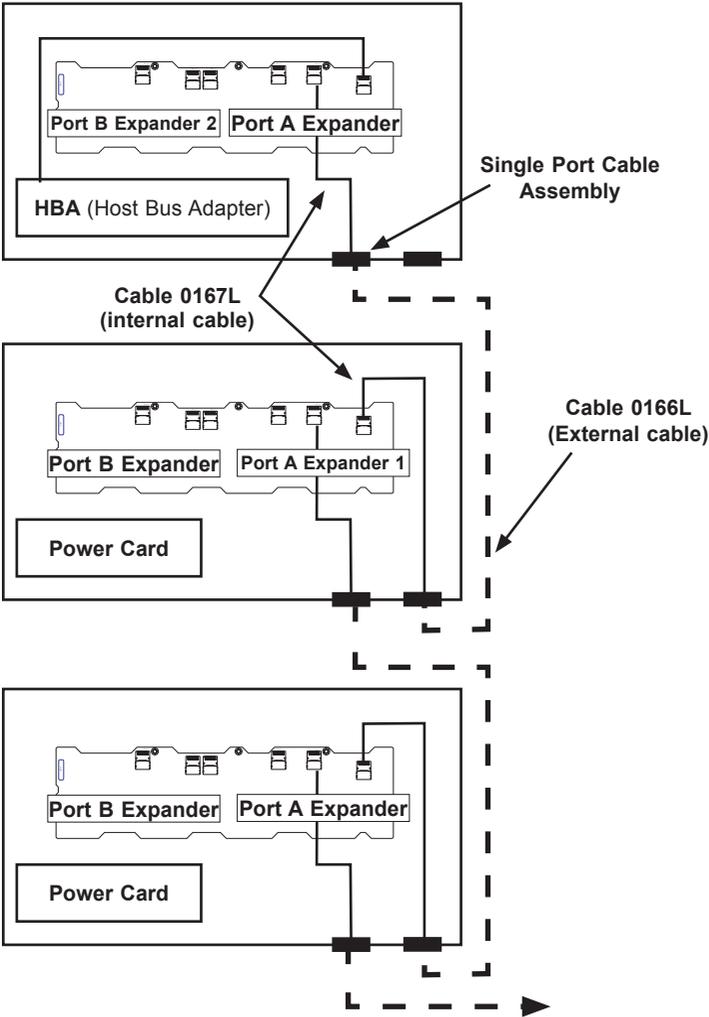


Figure C-24: Simple Cascaded Configuration

Server System with Single SAS HBA

The expanders allow horizontal branching. This configuration also applies to dual ports.

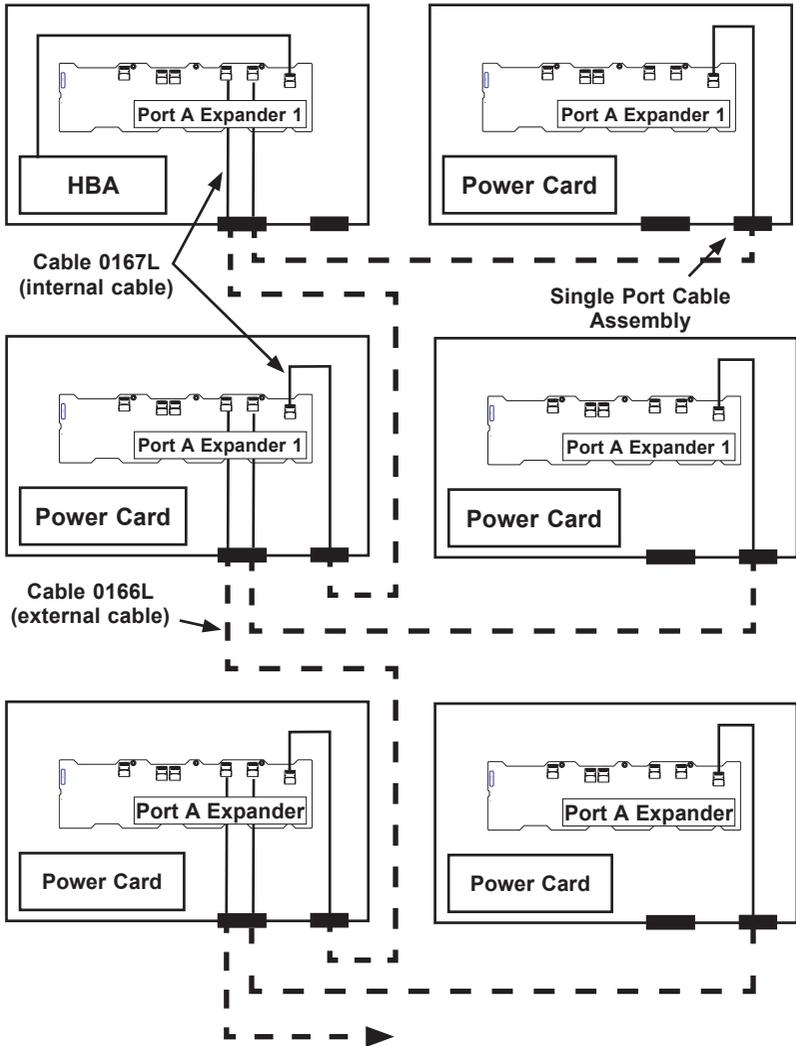


Figure C-25: Cascaded Configuration with Horizontal Branching

Dual SAS HBA and Cascaded Configuration

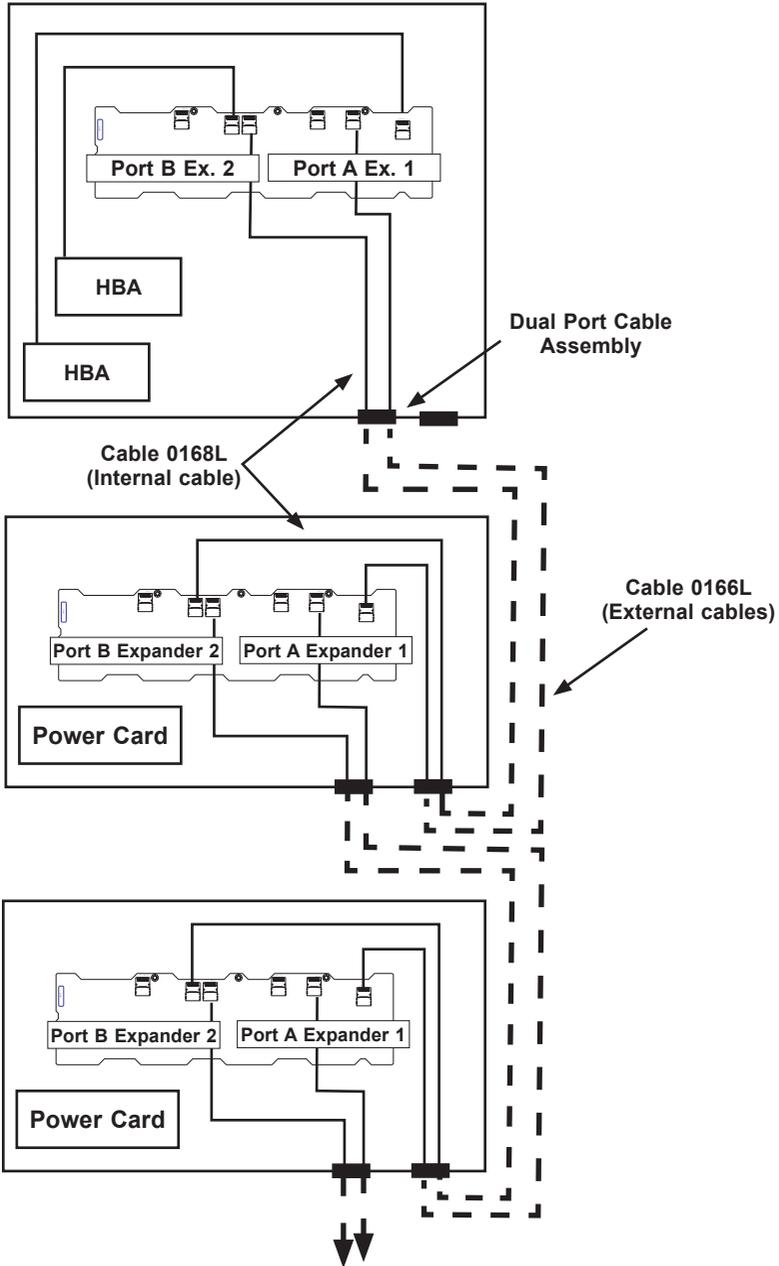


Figure C-26: Dual SAS HBA with Cascaded Configuration

Dual SAS HBA with Cascaded Configuration and Branching

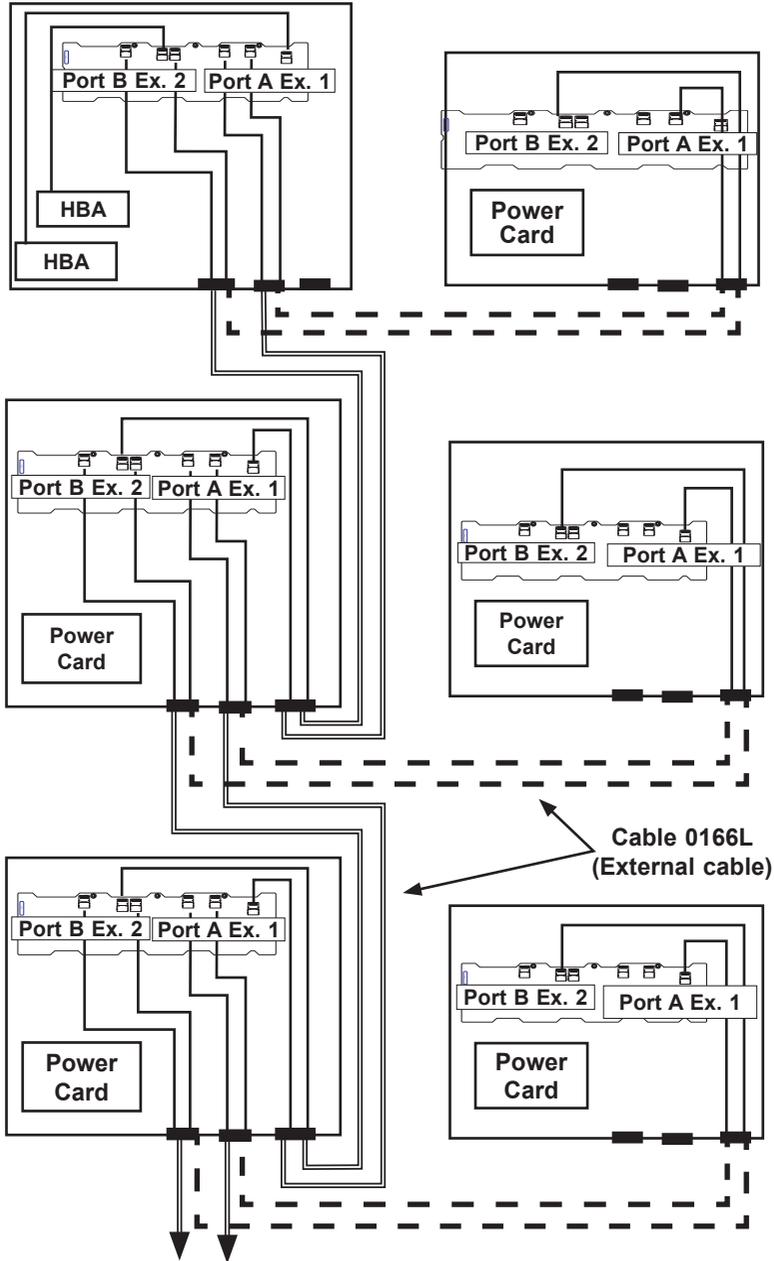


Figure C-27: Dual SAS HBA with Cascaded Configuration and Branching

Notes

Appendix D

SAS-836TQ Backplane Specifications

To avoid personal injury and property damage, carefully follow all the safety steps listed below when accessing your system or handling the components.

D-1 ESD Safety Guidelines

Electrostatic Discharge (ESD) can damage electronic components. To prevent damage to your system, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing a component from the antistatic bag.
- Handle the backplane by its edges only; do not touch its components, peripheral chips, memory modules or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the card and peripherals back into their antistatic bags when not in use.

D-2 General Safety Guidelines

- Always disconnect power cables before installing or removing any components from the computer, including this backplane.
- Disconnect the power cable before installing or removing any cables from this backplane.
- Make sure that the this backplane is securely and properly installed on the motherboard to prevent damage to the system due to power shortage.

D-3 An Important Note to Users

- All images and layouts shown in this user's guide are based upon the latest PCB Revision available at the time of publishing. The card you have received may or may not look exactly the same as the graphics shown in this manual.

D-4 Introduction to the SAS-836TQ Backplane

- The SAS-836TQ backplane has been designed to utilize the most up-to-date technology available, providing your system with reliable, high-quality performance.
- This manual reflects SAS-836TQ Revision 3.2, the most current release available at the time of publication. Always refer to the Supermicro Web site at www.supermicro.com for the latest updates, compatible parts and supported configurations.

D-5 Front Connectors and Jumpers

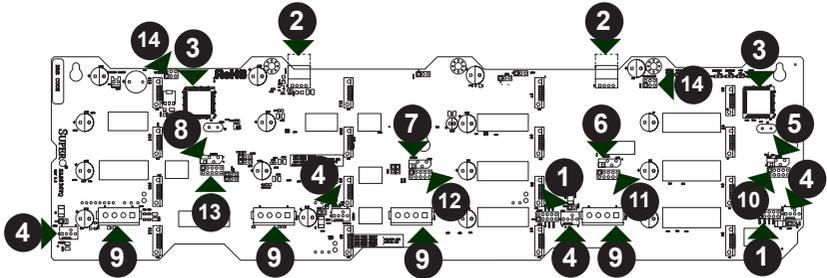


Figure D-1: Front Components

Front Connectors

- | | |
|--|-----------------------|
| #1. ACT_IN#0-15: JP26 and JP47 | #15. SAS Port #0 J5 |
| #2. DVD-ROM Drive Power: JP105 and JP106 | #16. SAS Port #1 J6 |
| #3. Chip: MG9072 | #17. SAS Port #2 J7 |
| #4. Fan Connectors: JP54, JP56, JP58 and JP60 | #18. SAS Port #3 J8 |
| #5. I ² C Connector#1 JP37 | #19. SAS Port #4 J10 |
| #6. I ² C Connector#2 JP95 | #20. SAS Port #5 J12 |
| #7. I ² C Connector#3 JP52 | #21. SAS Port #6 J14 |
| #8. I ² C Connector#4 JP96 | #22. SAS Port #7 J16 |
| #9. Power Connectors (4-pin): JP10, JP13, JP46, and JP48 | #23. SAS Port #8 J22 |
| #10. SideBand Connector#1 JP66 | #24. SAS Port #9 J23 |
| #11. SideBand Connector#2 JP68 | #25. SAS Port #10 J24 |
| #12. SideBand Connector#3 JP75 | #26. SAS Port #11 J25 |
| #13. SideBand Connector#4 JP77 | #27. SAS Port #12 J26 |
| #14. Upgrade Connectors: JP69 and JP78 | #28. SAS Port #13 J29 |
| | #29. SAS Port #14 J30 |
| | #30. SAS Port #15 J32 |

SAS Ports

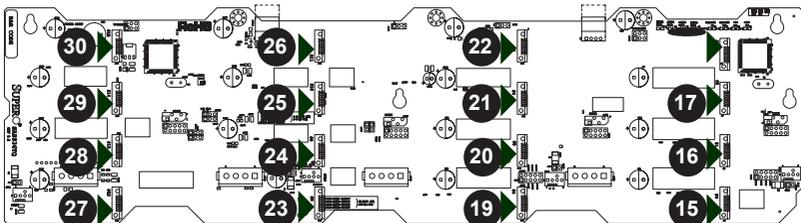


Figure D-2: SAS Ports

D-6 Front Connector and Pin Definitions

#1. Activity LED Header

The activity LED headers, designated JP26 and JP47, are used to indicate the activity status of each SAS drive. These activity LED headers are used by the host controller for the SATA drives that previously had no activity status output. If using a SAS drive, and for most SATA drives, these activity headers are not required. The Activity LED Header is located on the front panel. For the Activity LED Header to work properly, connect using a 10-pin LED cable.

| SAS Activity LED Header Pin Definitions | | | |
|--|------------|-------|------------|
| Pin # | Definition | Pin # | Definition |
| 1 | ACT IN#0 | 6 | ACT IN#4 |
| 2 | ACT IN#1 | 7 | ACT IN#5 |
| 3 | ACT IN#2 | 8 | ACT IN#6 |
| 4 | ACT IN#3 | 9 | ACT IN#7 |
| 5 | Ground | 10 | Empty |

| SAS Activity LED Header Pin Definitions | | | |
|--|------------|-------|------------|
| Pin # | Definition | Pin # | Definition |
| 1 | ACT IN#8 | 6 | ACT IN#12 |
| 2 | ACT IN#9 | 7 | ACT IN#13 |
| 3 | ACT IN#10 | 8 | ACT IN#14 |
| 4 | ACT IN#11 | 9 | ACT IN#15 |
| 5 | Ground | 10 | Empty |

#2. CD-ROM 4-Pin Connectors

The 4-pin connectors, designated JP105 and JP106, provide power to the CD-ROM drives. See the table on the right for pin definitions.

| CD-ROM/ FDD Power 4-Pin Connector | |
|---|------------|
| Pin# | Definition |
| 1 | +5V |
| 2 and 3 | Ground |
| 4 | +12V |

#3. MG9072 Chip

The MG9072 is an enclosure management chip that supports the SES-2 controller and SES-2 protocols.

#4. Fan Connectors

The 4-pin connectors, designated JP54, JP56, JP58 and JP60, provide power to the fans. See the table on the right for pin definitions. These 4-pin connectors are compatible with 3-pin and 4-pin fans.

| Fan Connectors | |
|----------------|---------------|
| Pin# | Definition |
| 1 | Ground |
| 2 | +12V |
| 3 | Tachometer |
| 4 | No connection |

#5., #6., #7., #8. I²C Y-Cable Connectors

The I²C Y-cable connectors, designated JP37, JP52, JP95, and JP96, are for enclosure management of the I²C mode connection. These connectors are used only if the I²C is not embedded into the sideband connectors. See the table on the right for pin definitions.

| I ² C Y-Cable Connector Pin Definitions | |
|--|---------------|
| Pin# | Definition |
| 1 | Data |
| 2 | Ground |
| 3 | Clock |
| 4 | No Connection |

#9. Backplane Main Power Connectors

The 4-pin connectors, designated JP10, JP13, JP46, and JP48, provide power to the backplane. See the table on the right for pin definitions. All four of these connectors must be used at the same time.

| Backplane Main Power 4-Pin Connector | |
|--------------------------------------|------------|
| Pin# | Definition |
| 1 | +12V |
| 2 and 3 | Ground |
| 4 | +5V |

#10., #11., #12., #13. Sideband Headers

The sideband headers are designated JP66, JP68, JP75 and JP77. are for enclosure management of the SGPIO mode connection. See the table to the right for pin definitions.

| Sideband Headers | | | |
|------------------|---|-------|--|
| Pin # | Definition | Pin # | Definition |
| 2 | SGPIO: SDIN I²C: Backplane Addressing (SB5) | 1 | Controller ID (SB6) |
| 4 | SGPIO: SDOUT I²C: Reset (SB4) | 3 | GND (SB2) |
| 6 | GND (SB3) | 5 | SGPIO: SLOAD I²C: SDA (SB1) |
| 8 | Backplane ID (SB7) | 7 | SGPIO: SCLOCK I²C: SCL (SB0) |
| 10 | No Connection | 9 | No Connection |

#14. Upgrade Connectors

The upgrade connectors are designated JP69 (for U19) and JP78 (for U40). Upgrade connectors are for manufacturing use only.

#15-#30. SAS Ports

The SAS ports are used to connect the SAS drive cables. The 16 ports are designated #0 - #15. Each port is also compatible with SATA drives.

D-7 Front Jumper Locations and Pin Definitions


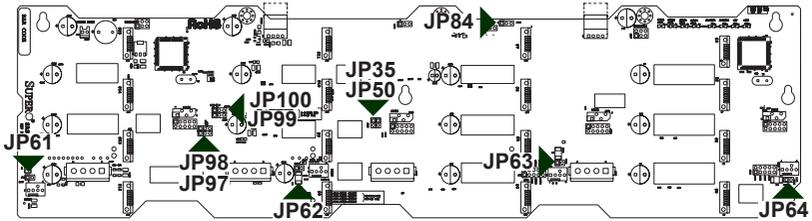


Figure D-2: Jumpers

Explanation of Jumpers

To modify the operation of the backplane, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board.

Note: On two pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

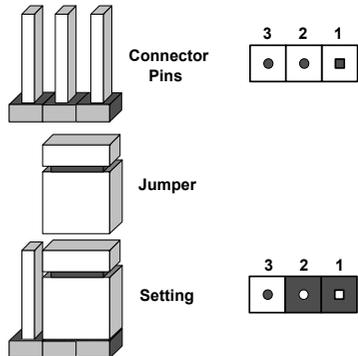

| General Jumper Settings | | |
|-------------------------|--------------------------------|--------------------|
| Jumper | Jumper Settings | Note |
| JP35 | Open: Default Closed: Reset | 9072 Chip Reset #1 |
| JP50 | Open: Default Closed: Reset | 9072 Chip Reset #2 |

Fan Jumper Settings

The SAS-836TQ backplane can use up to four fans. To utilize each fan, you must configure both jumpers as instructed below.

| Fan Jumper Settings | | |
|---------------------|--|-------------------------------------|
| Jumper | Jumper Settings | Note |
| JP61 | Closed: With Fan (default) Open: No Fan | Fan#1 Enable/Disable |
| JP54 | | Fan#1 Connector |
| JP62 | Closed: With Fan (default) Open: No Fan | Fan#2 Enable/Disable |
| JP56 | | Fan#2 Connector |
| JP63 | Closed: With Fan (default) Open: No Fan | Fan#3 Enable/Disable |
| JP58 | | Fan#3 Connector |
| JP64 | Closed: With Fan (default) Open: No Fan | Fan#4 Enable/Disable |
| JP60 | | Fan#4 Connector |
| JP97 | 1-2 With Fan (default) 2-3 No Fan | Fan #1 Selection for MG907X Monitor |
| JP98 | 1-2 With Fan (default) 2-3 No Fan | Fan #2 Selection for MG907X Monitor |
| JP99 | 1-2 With Fan (default) 2-3 No Fan | Fan #3 Selection for MG907X Monitor |
| JP100 | 1-2 With Fan (default) 2-3 No Fan | Fan #4 Selection for MG907X Monitor |

I²C and SGPIO Modes and Jumper Settings

This backplane can utilize I²C or SGPIO. SGPIO is the default mode and can be used without making changes to your jumpers. The following information details which jumpers must be configured to use SGPIO mode or restore your backplane to I²C mode.

| SGPIO/I ² C Settings | | |
|---------------------------------|---------------|--------------------------|
| Jumper | SGPIO Setting | I ² C Setting |
| JP84 | 1-2 (default) | 2-3 |

SAS Port Connections in I²C and SGPIO Settings

Use the following chart when connecting this backplane. If you connect the SAS ports out of order, you will not be able to easily identify drives using the LED function.

| SAS Port Connections in I ² C and SGPIO Settings | | |
|---|---------------------|-------------|
| Port # | I ² C | SGPIO |
| # 0 - 3 | I ² C #1 | Sideband #1 |
| # 4 - 7 | I ² C #2 | Sideband #2 |
| # 8 - 11 | I ² C #3 | Sideband #3 |
| # 12 - 15 | I ² C #4 | Sideband #4 |

Front LED Indicators


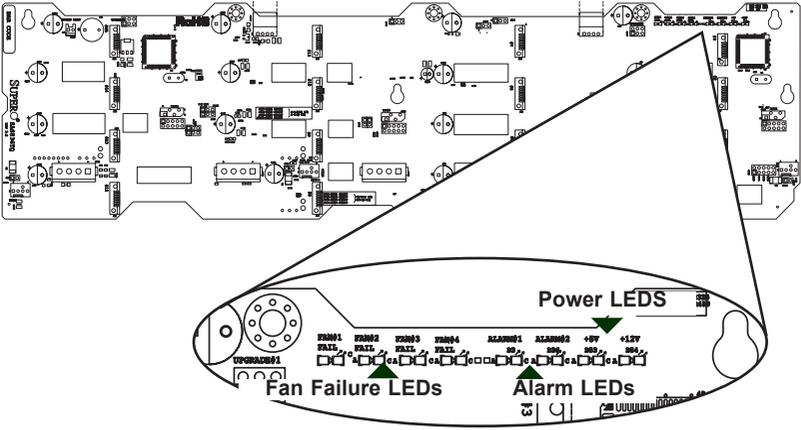


Figure D-3: Front LEDs

| Front Pane LEDs | | |
|-----------------|-------|---|
| LED | State | Specification |
| Fan #1 Fail | On | Failure in Fan #1 |
| Fan #2 Fail | On | Failure in Fan #2 |
| Fan #3 Fail | On | Failure in Fan #3 |
| Fan #4 Fail | On | Failure in Fan #4 |
| Alarm #1 | On | Overheat/fan failure/drive failure in Channel 1 |
| Alarm #2 | On | Overheat/fan failure/drive failure in Channel 2 |
| +5V | Off | Backplane power failure. Light is on during normal operation. |
| +12V | Off | Backplane power failure. Light is on during normal operation. |

D-8 Rear Connectors and LED Indicators

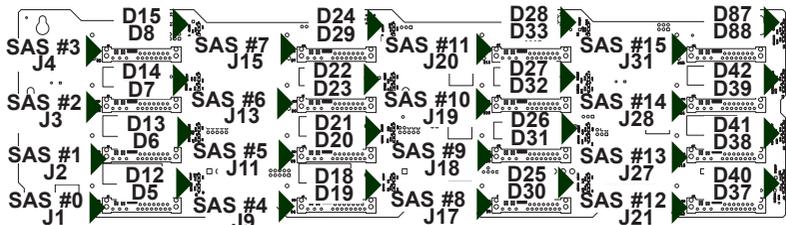

Rear SAS/SATA Connectors

| Rear Connector | SAS Drive Number | Rear Connector | SAS Drive Number |
|----------------|------------------|----------------|------------------|
| SAS #0 | SAS/SATA HDD #0 | SAS #8 | SAS/SATA HDD #8 |
| SAS #1 | SAS/SATA HDD #1 | SAS #9 | SAS/SATA HDD #9 |
| SAS #2 | SAS/SATA HDD #2 | SAS #10 | SAS/SATA HDD #10 |
| SAS #3 | SAS/SATA HDD #3 | SAS #11 | SAS/SATA HDD #11 |
| SAS #4 | SAS/SATA HDD #4 | SAS #12 | SAS/SATA HDD #12 |
| SAS #5 | SAS/SATA HDD #5 | SAS #13 | SAS/SATA HDD #13 |
| SAS #6 | SAS/SATA HDD #6 | SAS #14 | SAS/SATA HDD #14 |
| SAS #7 | SAS/SATA HDD #7 | SAS #15 | SAS/SATA HDD #15 |

Rear LED Indicators

| Rear LED | Hard Drive Activity | Failure LED |
|----------|---------------------|-------------|
| SAS #0 | D12 | D5 |
| SAS #1 | D13 | D6 |
| SAS #2 | D14 | D7 |
| SAS #3 | D15 | D8 |
| SAS #4 | D18 | D19 |
| SAS #5 | D21 | D20 |
| SAS #6 | D22 | D23 |
| SAS #7 | D24 | D29 |
| SAS #8 | D25 | D30 |
| SAS #9 | D26 | D31 |
| SAS #10 | D27 | D32 |
| SAS #11 | D28 | D33 |
| SAS #12 | D40 | D37 |
| SAS #13 | D41 | D38 |
| SAS #14 | D42 | D39 |
| SAS #15 | D87 | D88 |

Notes

Appendix E

SAS-836A Backplane Specifications

To avoid personal injury and property damage, carefully follow all the safety steps listed below when accessing your system or handling the components.

1-1 ESD Safety Guidelines

Electrostatic Discharge (ESD) can damage electronic components. To prevent damage to your system, it is important to handle the backplane very carefully. The following measures are generally sufficient to protect your equipment from ESD.

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing a component from the antistatic bag.
- Handle the backplane by its edges only; do not touch its components, peripheral chips, memory modules or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the card and peripherals back into their antistatic bags when not in use.

1-2 General Safety Guidelines

- Always disconnect power cables before installing or removing any components from the computer, including this backplane.
- Disconnect the power cable before installing or removing any cables from the backplane.
- Make sure that the backplane is installed properly and securely on the motherboard to prevent damage to the system due to power shortage.

1-3 An Important Note to Users

- All images and layouts shown in this user's guide are based upon the latest PCB revision available at the time of publishing. The card you have received may or may not look exactly the same as the graphics shown in this manual.

1-4 Introduction to the SAS-836A Backplane

The SAS-836A backplane has been designed to utilize the most up-to-date technology available, providing your system with reliable, high-quality performance.

This manual reflects SAS-836A Revision 1.00, the most current release available at the time of publication. Always refer to the Supermicro Web site at www.supermicro.com for the latest updates, compatible parts and supported configurations.

2-1 Front Connectors and Jumpers

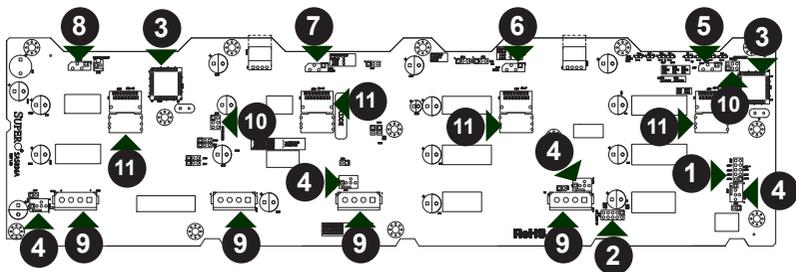


Figure 2-1: Front Connectors

Front Connectors

- | | |
|--|---|
| #1. Activity LED Header ACT_IN#0-7: JP26 | #7. I ² C Connector#3 JP52 |
| #2. Activity LED Header ACT_IN#8-15: JP47 | #8. I ² C Connector#4 JP96 |
| #3. Chip: MG9072 | #9. Power Connectors (4-pin): JP10, JP13, JP46, and JP48 |
| #4. Fan Connectors: JP54, JP56, JP58 and JP60 | #10. Upgrade Connectors: JP69 and JP78 |
| #5. I ² C Connector#1 JP37 | #11. IPASS Connectors JSM1, JSM2, JSM3 and JSM4 |
| #6. I ² C Connector#2 JP95 | |

2-2 Front Connector and Pin Definitions

#1 - #2. Activity LED Header

The activity LED headers, designated JP26 and JP47, are used to indicate the activity status of each SAS drive. These activity LED headers are used by the host controller for the SATA drives that previously had no activity status output. If using a SAS drive, and for most SATA drives, these activity headers are not required. The Activity LED Header is located on the front panel. For the Activity LED Header to work properly, connect using a 10-pin LED cable.

| SAS Activity LED Header Pin Definitions | | | |
|--|------------|-------|------------|
| Pin # | Definition | Pin # | Definition |
| 1 | ACT IN#0 | 6 | ACT IN#4 |
| 2 | ACT IN#1 | 7 | ACT IN#5 |
| 3 | ACT IN#2 | 8 | ACT IN#6 |
| 4 | ACT IN#3 | 9 | ACT IN#7 |
| 5 | Ground | 10 | Empty |

| SAS Activity LED Header Pin Definitions | | | |
|--|------------|-------|------------|
| Pin # | Definition | Pin # | Definition |
| 1 | ACT IN#8 | 6 | ACT IN#12 |
| 2 | ACT IN#9 | 7 | ACT IN#13 |
| 3 | ACT IN#10 | 8 | ACT IN#14 |
| 4 | ACT IN#11 | 9 | ACT IN#15 |
| 5 | Ground | 10 | Empty |

#3. MG9072 Chips

The MG9072 chips are enclosure management chips that support the SES-2 controller and SES-2 protocols.

#4. Fan Connectors

The 4-pin connectors, designated JP54, JP56, JP58 and JP60, provide power to the fans. See the table on the right for pin definitions. These 4-pin connectors are compatible with 3-pin and 4-pin fans.

| Fan Connectors | |
|----------------|---------------|
| Pin# | Definition |
| 1 | Ground |
| 2 | +12V |
| 3 | Tachometer |
| 4 | No connection |

#5., #6., #7., #8. I²C Connectors

The I²C connectors, designated JP37, JP52, JP95, and JP96, are for enclosure management of the I²C mode connection. See the table on the right for pin definitions.

| I ² C Y-Cable Connector Pin Definitions | |
|--|---------------|
| Pin# | Definition |
| 1 | Data |
| 2 | Ground |
| 3 | Clock |
| 4 | No Connection |

#9. Backplane Main Power Connectors

The 4-pin connectors, designated JP10, JP13, JP46, and JP48, provide power to the backplane. See the table on the right for pin definitions. All four of these connectors must be used at the same time.

| Backplane Main Power 4-Pin Connector | |
|--------------------------------------|------------|
| Pin# | Definition |
| 1 | +12V |
| 2 and 3 | Ground |
| 4 | +5V |

#10. Upgrade Connectors

The upgrade connectors are designated JP69 (for U19) and JP78 (for U40). Upgrade connectors are for manufacturing use only.

2-3 Front Jumper Locations and Pin Definitions


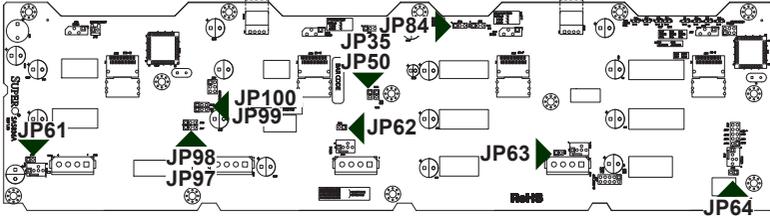


Figure 2-2: Front Jumpers

Explanation of Jumpers

To modify the operation of the backplane, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board.

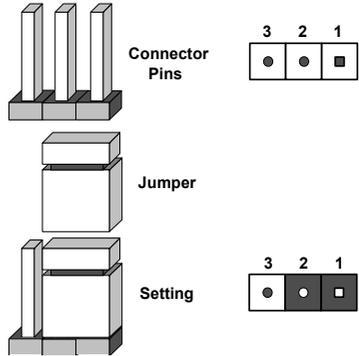

Note: On two pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

| General Jumper Settings | | |
|-------------------------|--------------------------------|----------------------|
| Jumper | Jumper Settings | Note |
| JP35 | Open: Default Closed: Reset | MG9072 chip reset #1 |
| JP50 | Open: Default Closed: Reset | MG9072 chip reset #2 |

Fan Jumper Settings

The SAS-836A backplane can use up to four fans. To utilize each fan, both jumpers must be configured as instructed below.

| Fan Jumper Settings | | |
|---------------------|--|--|
| Jumper | Jumper Settings | Note |
| JP61 | Closed: With fan (default) Open: No fan | Fan#1 enable/disable |
| JP54 | | Fan#1 connector |
| JP62 | Closed: With fan (default) Open: No fan | Fan#2 enable/disable |
| JP56 | | Fan#2 connector |
| JP63 | Closed: With fan (default) Open: No fan | Fan#3 enable/disable |
| JP58 | | Fan#3 connector |
| JP64 | Closed: With fan (default) Open: No fan | Fan#4 enable/disable |
| JP60 | | Fan#4 connector |
| JP97 | 1-2 With fan (default) 2-3 No fan | Fan #1 selection for MG907X Monitor |
| JP99 | 1-2 With fan (default) 2-3 No fan | Fan #2 selection for MG907X Monitor |
| JP100 | 1-2 With fan (default) 2-3 No fan | Fan #3 selection for MG907X Monitor |
| JP100 | 1-2 With fan (default) 2-3 No fan | Fan #4 selection for MG907X Monitor |

I²C and SGPIO Modes and Jumper Settings

This backplane can utilize I²C or SGPIO. SGPIO is the default mode and can be used without making changes to your jumpers. The following information details which jumpers must be configured to use SGPIO mode or restore your backplane to I²C mode.

| SGPIO/I ² C Setting | | |
|--------------------------------|----------------------|---------------------------------|
| Jumper | SGPIO Jumper Setting | I ² C Jumper Setting |
| JP84 | 1-2 (default) | 2-3 |

Front LED Indicators

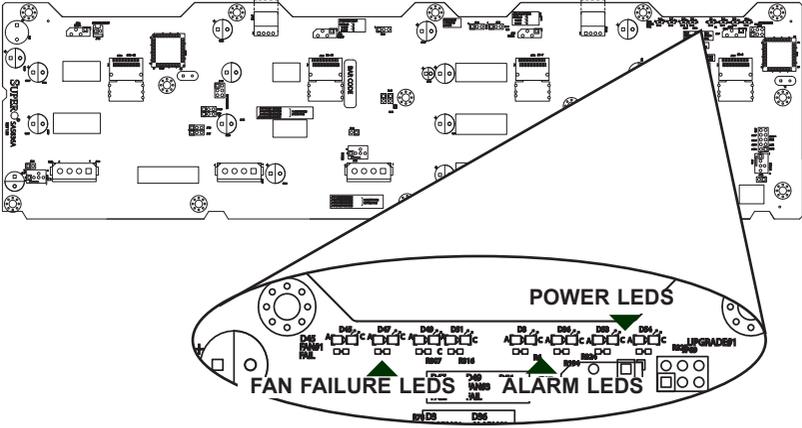


Figure 2-3: Front LEDs

| Front LEDs | | |
|-------------|-------|---|
| LED | State | Specification |
| Fan #1 Fail | On | Fan #1 failure |
| Fan #2 Fail | On | Fan #2 failure |
| Fan #3 Fail | On | Fan #3 failure |
| Fan #4 Fail | On | Fan #4 failure |
| Alarm #1 | On | Overheat/fan failure/drive failure in Channel 1 |
| Alarm #2 | On | Overheat/fan failure/drive failure in Channel 2 |
| +5V | Off | Backplane power failure. Light is on during normal operation. |
| +12V | Off | Backplane power failure. Light is on during normal operation. |

2-4 Rear Connectors and LED Indicators

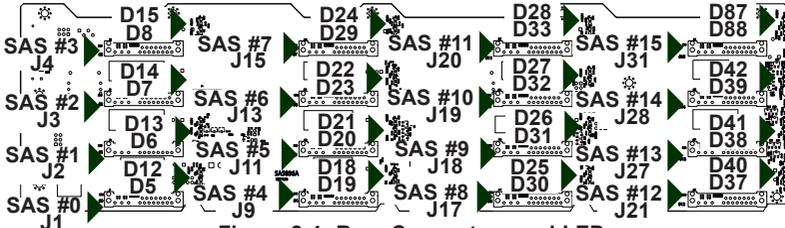


Figure 2-4: Rear Connectors and LEDs

| Rear SAS/SATA Connectors | | | |
|--------------------------|------------------|----------------|------------------|
| Rear Connector | SAS Drive Number | Rear Connector | SAS Drive Number |
| SAS #0 | SAS/SATA HDD #0 | SAS #8 | SAS/SATA HDD #8 |
| SAS #1 | SAS/SATA HDD #1 | SAS #9 | SAS/SATA HDD #9 |
| SAS #2 | SAS/SATA HDD #2 | SAS #10 | SAS/SATA HDD #10 |
| SAS #3 | SAS/SATA HDD #3 | SAS #11 | SAS/SATA HDD #11 |
| SAS #4 | SAS/SATA HDD #4 | SAS #12 | SAS/SATA HDD #12 |
| SAS #5 | SAS/SATA HDD #5 | SAS #13 | SAS/SATA HDD #13 |
| SAS #6 | SAS/SATA HDD #6 | SAS #14 | SAS/SATA HDD #14 |
| SAS #7 | SAS/SATA HDD #7 | SAS #15 | SAS/SATA HDD #15 |

| Rear LED Indicators | | |
|---------------------|---------------------|-------------|
| Rear LED | Hard Drive Activity | Failure LED |
| SAS #0 | D12 | D5 |
| SAS #1 | D13 | D6 |
| SAS #2 | D14 | D7 |
| SAS #3 | D15 | D8 |
| SAS #4 | D18 | D19 |
| SAS #5 | D21 | D20 |
| SAS #6 | D22 | D23 |
| SAS #7 | D24 | D29 |
| SAS #8 | D25 | D30 |
| SAS #9 | D26 | D31 |
| SAS #10 | D27 | D32 |
| SAS #11 | D28 | D33 |
| SAS #12 | D40 | D37 |
| SAS #13 | D41 | D38 |
| SAS #14 | D42 | D39 |
| SAS #15 | D87 | D88 |

Notes

Appendix F

PCC-JBPWR2 and CSE-PTJBOD-CB1

Power Control Card Specifications

To avoid personal injury and property damage, carefully follow all the safety steps listed below when accessing your system or handling the components.

F-1 ESD Safety Guidelines

Electrostatic Discharge (ESD) can damage electronic components. To prevent damage to your system, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing a component from the antistatic bag.
- Handle the card by its edges only; do not touch its components, peripheral chips, memory modules or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the card and peripherals back into their antistatic bags when not in use.

F-2 General Safety Guidelines

- Always disconnect power cables before installing or removing any components from the computer.
- Disconnect the power cable before installing or removing any cables from the card.
- Make sure that the card is securely and properly installed on the motherboard to prevent damage to the system due to power shortage.

F-3 An Important Note to Users

- All images and layouts shown in this user's guide are based upon the latest PCB Revision available at the time of publishing. The card you have received may or may not look exactly the same as the graphics shown in this manual.

F-4 Front Connectors

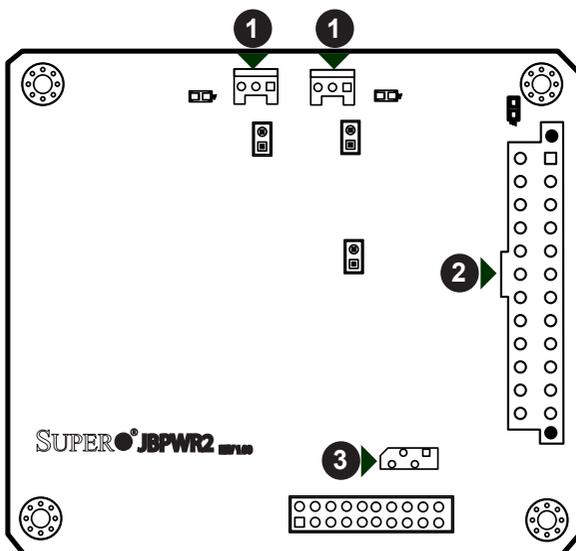


Figure F-1: Front Connectors

Front Connectors

- #1. Fan1 and Fan2 connectors
- #2. Power connector
- #3. Power fault connector (MCU power on switch)

F-5 Front Connector and Pin Definitions

#1. Fan Connectors

The 3-pin connectors, designated Fan1 and Fan2, provide power to the fans.

Since the system will use the power card instead of a motherboard, two fans provide sufficient cooling for the server.

#2. Main Power Connector

The 12-pin connector provides power to the card to be distributed to the chassis components.

#3. Power Fault Connector (MCU Power On Switch)

In normal operating mode, power is governed by the MCU (Micro Controller Unit). As a security measure, the switch must be depressed for at least four seconds to power down the system.

In the case of an unexpected loss of power, the MCU will return the system to the power state it was in at the time when power was lost.

#4. LED and Switch Connector

The LED Header and Switch Connector, designated JF1, is cabled directly to the front panel. This allows the front panel to display system status.

| Fan Connectors | |
|-----------------|------------|
| Pin# Definition | |
| 1 | Ground |
| 2 | +12V |
| 3 | Tachometer |

| Power Fault Connector (MCU Power On Switch) | |
|---|----------------|
| Pin# Definition | |
| 1 | Power Fault #1 |
| 2 | Power Fault #2 |
| 3 | Power Fault #3 |
| 4 | Reserved |

| LED and Switch Connector | | | |
|--------------------------|---------|------------------|-----------------|
| Pin # Definition | | Pin # Definition | |
| 1 | Power | 2 | Ground |
| 3 | Reset | 4 | Ground |
| 5 | Vcc | 6 | Power Fail LED |
| 7 | Vcc | 8 | OH/Fan Fail LED |
| 9 | Vcc | 10 | NIC2 |
| 11 | Vcc | 12 | NIC1 |
| 13 | Vcc | 14 | HDD LED |
| 15 | Vcc | 16 | Power LED |
| 17 | x (Key) | 18 | x (Key) |
| 19 | NMI | 20 | Ground |

F-6 Front Jumper Locations and Pin Definitions


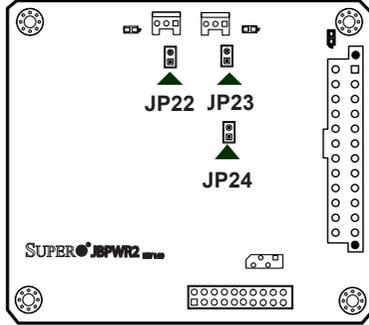


Figure F-2: Front Jumpers

Explanation of Jumpers

To modify the operation of the backplane, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board. Note: On two pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

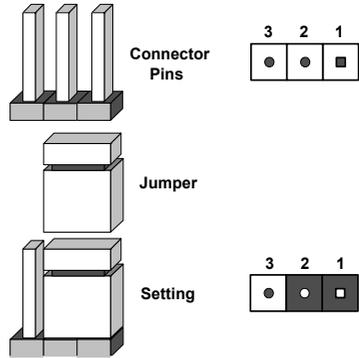

| Jumper Settings | | |
|-----------------|-----------------------------------|---------|
| Jumper | Jumper Settings | Note |
| JP22 | Closed: Enabled Open: Disabled | Fan1 |
| JP23 | Closed: Enabled Open: Disabled | Fan2 |
| JP24 | Closed: Enabled Open: Disabled | Buzzer* |

*The buzzer sound indicates that a condition requiring immediate attention has occurred.

The buzzer alarm is triggered by the following conditions:

1. Hard drive failure
2. Fan failure
3. System temperature over 45° Celsius.

F-7 LED Indicators

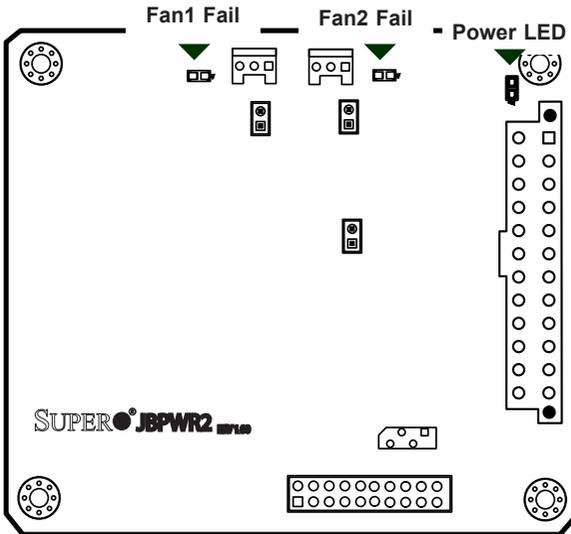


Figure F-3: LEDs

| Front LEDs | | |
|------------|-------|---------------------------------|
| LED | State | Specification |
| Power LED | ON | Activity in Power Control Board |
| Fan1 Fail | ON | Failure in Fan 1 |
| Fan2 Fail | ON | Failure in Fan 2 |

E-8 Power Card Placement

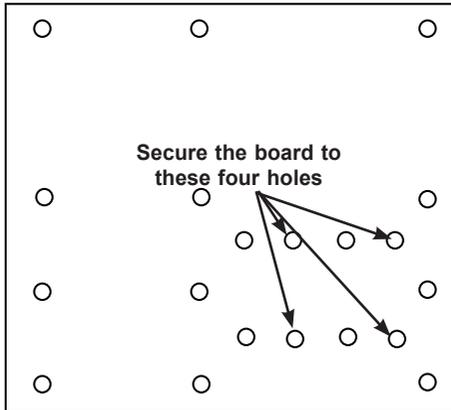


Figure F-4: Fastening the Power Card

Notes

Disclaimer (cont.)

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.